

ASA 4.0 Advanced

SOFT STARTER

User Manual

Issued on 01/08/18

R. 01

- This manual is integrant and essential to the product. Carefully read the instructions contained herein as they provide important hints for use and maintenance safety.
- This device is to be used only for the purposes it has been designed to. Other uses should be considered improper and dangerous. The manufacturer is not responsible for possible damages caused by improper, erroneous and irrational uses.
- Enertronica Santerno is responsible for the device in its original setting.
- Any changes to the structure or operating cycle of the device must be performed or authorized by the Engineering Department of Enertronica Santerno.
- Enertronica Santerno assumes no responsibility for the consequences resulting by the use of non-original spare parts.
- Enertronica Santerno reserves the right to make any technical changes to this manual and to the device without prior notice. If printing errors or similar are detected, the corrections will be included in the new releases of the manual.
- The information contained herein is the property of Enertronica Santerno and cannot be reproduced. Enertronica Santerno enforces its rights on the drawings and catalogues according to the law.



Enertronica Santerno S.p.A.
Via della Concia, 7 - 40023 Castel Guelfo (BO) Italy
Tel. +39 0542 489711 – Fax +39 0542 489722
www.santerno.com - info@santerno.com

Contents

1	About This Manual	4
1.1	Disclaimer	4
2	Caution Statements	5
2.1	Electrical shock risk	5
2.2	Unexpected Operation	5
2.3	Avertissements à l'attention des clients canadiens	6
3	System Design	7
3.1	Feature List	7
3.2	Model Code	7
3.3	Model Selection	7
3.4	Current Ratings	8
3.5	Dimensions and Weights	9
3.6	Physical Installation	9
3.7	Accessories	10
3.8	Main Contactor	10
3.9	Circuit Breaker	10
3.10	Power Factor Correction	11
3.11	Short Circuit Protection Devices (SCPD)	11
3.12	IEC Coordination with Short Circuit Protection Devices	12
3.13	UL Coordination with Short Circuit Protection Devices	12
3.14	Fuse Selection for Type 2 Coordination	14
3.15	Specifications	14
3.16	Disposal Instructions	15
4	Installation	16
4.1	Command Source	16
4.2	Setup Procedure Overview	16
4.3	Inputs	17
4.4	Outputs	18
4.5	Control Voltage	19
4.6	Power Terminations	20
4.7	Typical Installation	22
4.8	Quick Setup	23
5	Setup Tools	24
5.1	Set Date and Time	24
5.2	Command Source	24
5.3	Commissioning	24
5.4	Run simulation	24
5.5	Load/Save Settings	25
5.6	USB Save & Load	25
5.7	Auto-Start/Stop	26
5.8	Network Address	26
5.9	Digital I/O State	27
5.10	Analog I/O State	27
5.11	Serial Number & Rating	27
5.12	Software Versions	27
5.13	Thermistor Reset	27
5.14	Reset Thermal Model	27
6	Logs	28
6.1	Event Log	28
6.2	Counters	28
6.3	QR Code	28
7	Keypad and Feedback	29
7.1	The Keypad	29
7.2	Remote Keypad	29
7.3	Lighten/Darken the Display	29
7.4	Starter status LEDs	30

7.5	Displays	30
8	Operation.....	32
8.1	Start, Stop and Reset Commands.....	32
8.2	Command Override.....	32
8.3	Auto-Start/Stop.....	32
8.4	PowerThrough.....	32
8.5	Emergency Mode.....	33
8.6	Auxiliary Trip	33
8.7	Typical Control Methods	33
8.8	Soft Start Methods.....	34
8.9	Stop Methods.....	36
8.10	Pump Clean	38
8.11	Reverse Direction Operation.....	38
8.12	Jog Operation.....	39
8.13	Inside Delta Operation.....	40
8.14	Secondary Motor Set.....	40
9	Programmable Parameters	41
9.1	Main Menu	41
9.2	Altering Parameter Values	41
9.3	Adjustment Lock.....	41
9.4	Parameter List.....	41
9.5	1 Motor Details	45
9.6	2 Motor Start/Stop	46
9.7	3 Motor Start/Stop-2	48
9.8	4 Auto-Start/Stop.....	50
9.9	5 Protection Levels.....	52
9.10	6 Protection Action	54
9.11	7 Inputs.....	56
9.12	8 Relay Outputs.....	58
9.13	9 Analog Output	59
9.14	10 Display.....	59
9.15	11 Pump Clean	61
9.16	12 Communications Card	62
9.17	20 Advanced	64
9.18	30 Pump Input Configuration.....	65
9.19	31 Flow Protection.....	66
9.20	32 Pressure Protection	67
9.21	33 Pressure Control.....	67
9.22	34 Depth Protection.....	68
9.23	35 Thermal Protection	68
9.24	36 Pump Trip Action	68
10	Application Examples	70
10.1	Smart Card - Pump Control and Protection.....	70
10.2	Smart Card - Level Controlled Pump Activation	71
11	Troubleshooting.....	72
11.1	Protection Responses.....	72
11.2	Trip Messages.....	72
11.3	General Faults.....	75

1 About This Manual



WARNING
Indicates a hazard that may cause personal injury or death.



CAUTION
Indicates a hazard that may damage the equipment or installation.



NOTE
Provides helpful information.

1.1 Disclaimer

The examples and diagrams in this manual are included solely for illustrative purposes.

The information contained in this manual is subject to change at any time and without prior notice. In no event will responsibility or liability be accepted for direct, indirect or consequential damages resulting from the use or application of this equipment.

2 Caution Statements

Caution Statements cannot cover every potential cause of equipment damage but can highlight common causes of damage. It is the installer's responsibility to read and understand all instructions in this manual prior to installing, operating or maintaining the equipment, to follow good electrical practice including applying appropriate personal protective equipment and to seek advice before operating this equipment in a manner other than as described in this manual.



NOTE

The ASA 4.0 Advanced is not user serviceable. The unit should only be serviced by authorised service personnel. Unauthorised tampering with the unit will void the product warranty.

2.1 Electrical shock risk



WARNING – ELECTRICAL SHOCK RISK

The voltages present in the following locations can cause severe electric shock and may be lethal:

- AC supply cables and connections
- Output cables and connections
- Many internal parts of the starter



SHORT CIRCUIT

The ASA 4.0 Advanced is not short circuit proof. After severe overload or short circuit, the operation of the ASA 4.0 Advanced should be fully tested by an authorised service agent.



GROUNDING AND BRANCH CIRCUIT PROTECTION

It is the responsibility of the user or person installing the ASA 4.0 Advanced to provide proper grounding and branch circuit protection according to local electrical safety codes.



FOR YOUR SAFETY

- The STOP function of the soft starter does not isolate dangerous voltages from the output of the starter. The soft starter must be disconnected by an approved electrical isolation device before accessing electrical connections.
- Soft starter protection features apply to motor protection only. It is the user's responsibility to ensure safety of personnel operating machinery.
- The soft starter is a component designed for integration within an electrical system; it is therefore the responsibility of the system designer/user to ensure the system is safe and designed to comply with relevant local safety standards.

2.2 Unexpected Operation



WARNING – ACCIDENTAL STARTS

In some installations, accidental starts may pose an increased risk to safety of personnel or damage to the machines being driven. In such cases, it is recommended that the power supply to the soft starter is fitted with an isolating switch and a circuit-breaking device (eg power contactor) controllable through an external safety system (eg emergency stop, fault detector).



WARNING – STARTER MAY START OR STOP UNEXPECTEDLY

The ASA 4.0 Advanced will respond to control commands from various sources, and could start or stop unexpectedly. Always disconnect the soft starter from mains voltage before accessing the starter or load.



WARNING – DISCONNECT MAINS BEFORE ACCESSING STARTER OR LOAD

The soft starter has built-in protections which can trip the starter in the event of faults and thus stop the motor. Voltage fluctuations, power cuts and motor jams may also cause the motor to trip.

The motor could restart after the causes of shutdown are rectified, which may be dangerous for personnel. Always disconnect the soft starter from mains voltage before accessing the starter or load.



CAUTION – MECHANICAL DAMAGE FROM UNEXPECTED RESTART

The motor could restart after the causes of shutdown are rectified, which may be dangerous for certain machines or installations. In such cases, it is essential that appropriate arrangements are made against restarting after unscheduled stops of the motor.

2.3 Avertissements à l'attention des clients canadiens



AVERTISSEMENT

L'icône AVERTISSEMENT ci-contre signale les informations concernant des risques pouvant entraîner des blessures graves, voire mortelles. Pour votre sécurité, veuillez consulter les avertissements sur cette page ou demander une copie du présent manuel en français auprès de votre distributeur local.



AVERTISSEMENT – RISQUE DE CHOC ÉLECTRIQUE

Les zones suivantes sont soumises à des tensions pouvant provoquer des risques de chocs électriques graves, voire mortels :

- Raccordement et câbles d'alimentation AC
- Câbles et raccordements de sortie
- De nombreuses pièces internes du démarreur



PAR SÉCURITÉ

- La fonction STOP du démarreur progressif n'isole pas des tensions dangereuses de la sortie du démarreur. Le démarreur progressif doit être déconnecté par un dispositif d'isolement électrique approprié avant d'accéder aux connexions électriques.
- Les fonctions de protection du démarreur progressif ne concernent que la protection du moteur. Il relève de la responsabilité de l'utilisateur d'assurer la sécurité des personnes travaillant sur les machines.
- Le démarreur progressif est un appareil conçu pour s'intégrer dans un système électrique ; il relève donc de la responsabilité du concepteur ou de l'utilisateur de veiller à ce que ce système soit sûr et conçu selon les normes de sécurité locales en vigueur.



AVERTISSEMENT – DÉMARRAGES ACCIDENTELS

Dans certaines installations, des démarrages accidentels peuvent provoquer un risque supplémentaire pour la sécurité des personnes ou endommager les machines contrôlées. Dans de tels cas, il est recommandé de doter l'alimentation du démarreur progressif d'un interrupteur d'isolement et d'un coupe-circuit (par exemple, un disjoncteur) contrôlable à partir d'un système de sécurité externe (par exemple, un arrêt d'urgence, un détecteur de défaut).



AVERTISSEMENT – LE DÉMARREUR PEUT DÉMARRER OU S'ARRÊTER À TOUT MOMENT

L'ASA 4.0 Advanced répond aux commandes de contrôle de différentes origines et peut par conséquent démarrer ou s'arrêter à tout moment. Toujours déconnecter le démarreur de la tension secteur avant d'accéder au démarreur ou à la charge.



AVERTISSEMENT – DÉCONNECTER L'ALIMENTATION PRINCIPALE AVANT D'ACCÉDER AU DÉMARREUR OU À LA CHARGE

Le démarreur progressif comporte des protections intégrées qui peuvent déclencher des mises en sécurité dans l'éventualité de défauts et ainsi arrêter le moteur. Des fluctuations de tension, des coupures d'alimentation et des blocages du moteur peuvent produire des mises en sécurité de celui-ci.

Le moteur pourrait redémarrer une fois que les causes de l'arrêt ont été résolues, ce qui pourrait mettre en danger le personnel. Toujours déconnecter le démarreur de la tension secteur avant d'accéder au démarreur ou à la charge.



AVERTISSEMENT

Ne pas appliquer la tension du secteur au démarreur tant que tout le câblage n'est pas terminé.



AVERTISSEMENT

Toujours appliquer la tension de commande avant (ou en même temps que) la tension secteur.



AVERTISSEMENT

Lors du raccordement de l'ASA 4.0 Advanced en connexion 6 fils, toujours installer un contacteur principal ou un disjoncteur magnéto-thermique à bobine de déclenchement.



AVERTISSEMENT

Si l'entrée de démarrage est fermée lorsque la tension de commande est appliquée, le démarreur tentera d'effectuer un démarrage.

Vérifier que l'entrée de démarrage/arrêt est ouverte avant d'appliquer la tension de commande.

3 System Design

3.1 Feature List

Streamlined setup process

- Configuration profiles for common applications
- Built-in metering and inputs/outputs

Easy to understand interface

- Multi-language menus and displays
- Descriptive option names and feedback messages
- Real-time performance graphs

Supports energy efficiency

- IE3 compatible
- 99% energy efficient when running
- Internal bypass
- Soft start technology avoids harmonic distortion

Extensive range of models

- 24 A~580 A (nominal)
- 200~525 VAC
- 380~690 VAC
- Inside delta installation

Extensive input and output options

- Remote control inputs
(2 x fixed, 2 x programmable)
- Relay outputs
(1 x fixed, 2 x programmable)
- Analog output

Versatile starting and stopping options

- Scheduled start/stop
- Adaptive Control
- Constant Current
- Current Ramp
- Pump Clean
- Timed voltage ramp soft stop
- Coast To Stop
- DC Brake
- Soft Brake
- Reverse Direction


Customisable protection

- Motor overload
- Excess Start Time
- Undercurrent/Overcurrent
- Underpower/Overpower
- Undervoltage/Overvoltage
- Current imbalance
- Input Trip
- Motor thermistor

Optional features for advanced applications

- Smart cards
- Communication options: DeviceNet, Ethernet/IP, Modbus RTU, Modbus TCP, Profibus, Profinet

3.2 Model Code

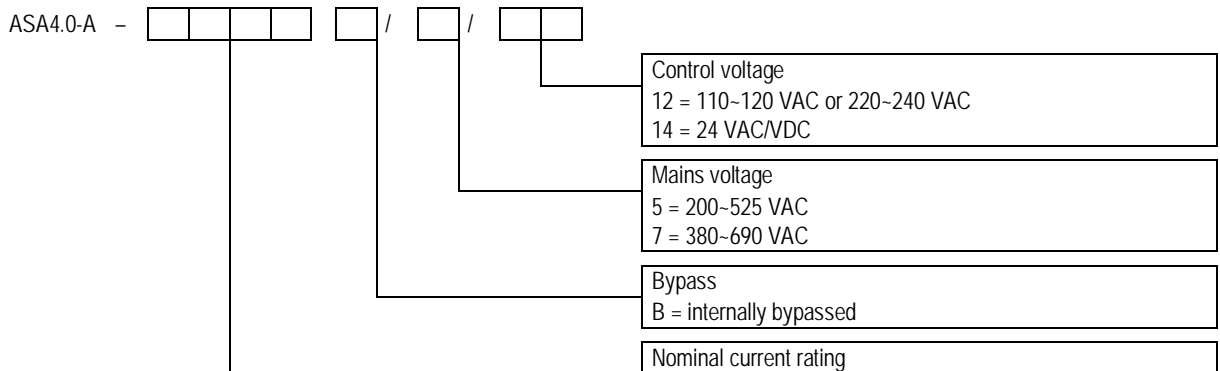

3.3 Model Selection

3.3.1 Starter sizing

The soft starter must be the correct size for the motor and the application.

Select a soft starter that has a current rating at least equal to the motor's full load current (nameplate) rating, at the start duty.

The soft starter's current rating determines the maximum motor size it can be used with. The soft starter's rating depends on the number of starts per hour, the length and current level of the start, and the amount of time the soft starter will be off (not passing current) between starts.


The soft starter's current rating is only valid when used in the conditions specified in the AC53b code - the soft starter may have a higher or lower current rating in different operating conditions.

3.4 Current Ratings

For operating conditions not covered by these ratings charts, download Santerno's free WinStart selection application, or contact your local supplier.

3.4.1 IEC ratings

AC53b format

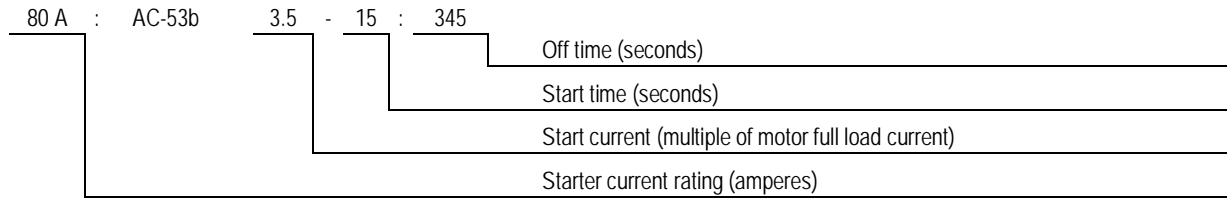

Ratings

All ratings are calculated at altitude of 1000 metres and ambient temperature of 40 °C.


In-line installation

	3.0-10:350	3.5-15:345	4.0-10:350	4.0-20:340	5.0-5:355
ASA4.0-A 0024B	24	20	19	16	17
ASA4.0-A 0042B	42	34	34	27	32
ASA4.0-A 0052B	52	42	39	35	34
	3.0-10:590	3.5-15:585	4.0-10:590	4.0-20:580	5.0-5:595
ASA4.0-A 0064B	64	63	60	51	54
ASA4.0-A 0069B	69	69	69	62	65
ASA4.0-A 0105B	105	86	84	69	77
ASA4.0-A 0115B	115	108	105	86	95
ASA4.0-A 0135B	135	129	126	103	115
ASA4.0-A 0184B	184	144	139	116	127
ASA4.0-A 0200B	200	171	165	138	150
ASA4.0-A 0229B	229	194	187	157	170
ASA4.0-A 0250B	250	244	230	200	202
ASA4.0-A 0352B	352	287	277	234	258
ASA4.0-A 0397B	397	323	311	263	289
ASA4.0-A 0410B	410	410	410	380	400
ASA4.0-A 0550B	550	527	506	427	464
ASA4.0-A 0580B	580	579	555	470	508

Inside delta installation


	3.0-10:350	3.5-15:345	4.0-10:350	4.0-20:340	5.0-5:355
ASA4.0-A 0024B	36	30	28	24	25
ASA4.0-A 0042B	63	51	51	40	48
ASA4.0-A 0052B	78	63	58	52	51
	3.0-10:590	3.5-15:585	4.0-10:590	4.0-20:580	5.0-5:595
ASA4.0-A 0064B	96	94	90	76	81
ASA4.0-A 0069B	103	103	103	93	97
ASA4.0-A 0105B	157	129	126	103	115
ASA4.0-A 0115B	172	162	157	129	142
ASA4.0-A 0135B	202	193	189	154	172
ASA4.0-A 0184B	276	216	208	174	190
ASA4.0-A 0200B	300	256	247	207	225
ASA4.0-A 0229B	343	291	280	235	255
ASA4.0-A 0250B	375	366	345	300	303
ASA4.0-A 0352B	528	430	415	351	387
ASA4.0-A 0397B	595	484	466	394	433
ASA4.0-A 0410B	615	615	615	570	600
ASA4.0-A 0550B	825	790	759	640	696
ASA4.0-A 0580B	870	868	832	705	762

3.5 Dimensions and Weights

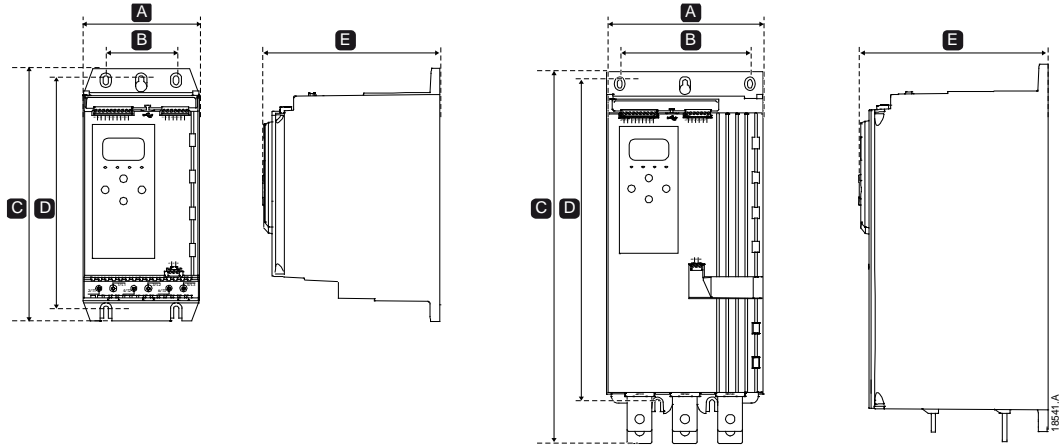

	Width mm (inch)		Height mm (inch)		Depth mm (inch)	Weight kg (lb)		
	A	B	C	D	E			
ASA4.0-A 0024B	152 (6.0)	92 (3.6)	336 (13.2)	307 (12.1)	231 (9.1)	4.8 (10.7)		
ASA4.0-A 0042B								
ASA4.0-A 0052B								
ASA4.0-A 0064B						4.9 (10.9)		
ASA4.0-A 0069B								
ASA4.0-A 0105B								
ASA4.0-A 0115B						5.5 (12.1)		
ASA4.0-A 0135B								
ASA4.0-A 0184B	216 (8.5)	180 (7.1)	495 (19.5)	450 (17.7)	243 (9.6)	12.7 (28.0)		
ASA4.0-A 0200B			523 (20.6)					
ASA4.0-A 0229B								
ASA4.0-A 0250B								
ASA4.0-A 0352B			15.5 (34.2)					
ASA4.0-A 0397B								
ASA4.0-A 0410B								
ASA4.0-A 0550B			19.0 (41.9)					
ASA4.0-A 0580B								

3.6 Physical Installation

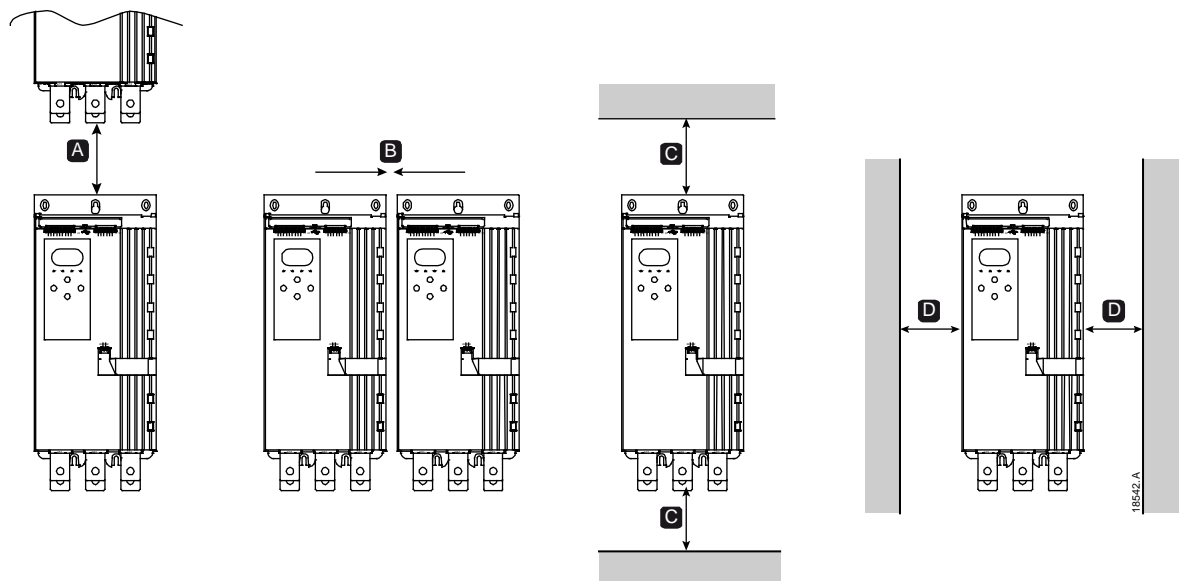

Between starters		Solid surfaces	
A	B	C	D
> 100 mm (3.9 inch)	> 10 mm (0.4 inch)	> 100 mm (3.9 inch)	> 10 mm (0.4 inch)

3.7 Accessories

3.7.1 Expansion Cards

The ASA 4.0 Advanced offers expansion cards for users requiring additional inputs and outputs or advanced functionality. Each ASA 4.0 Advanced can support a maximum of one expansion card.

Smart Card

The smart card has been designed to support integration with pumping applications and provides the following additional inputs and outputs:

- 3 x digital inputs
- 3 x 4-20 mA transducer inputs
- 1 x RTD input
- 1 x USB-B port
- Remote keypad connector

Communication Expansion Cards

The ASA 4.0 Advanced supports network communication via easy-to-install communications expansion cards. Each communications card includes a remote keypad connector port.

Available protocols:

DeviceNet, Ethernet/IP, Modbus RTU, Modbus TCP, Profibus, Profinet.

3.7.2 Remote Keypad

ASA 4.0 Advanced starters can be used with a remote keypad, mounted up to 3 metres away from the starter. Each expansion card includes a keypad connection port, or a dedicated keypad connector card is available.

3.7.3 Finger Guard Kit

Finger guards may be specified for personnel safety. Finger guards fit over the soft starter terminals to prevent accidental contact with live terminals. Finger guards provide IP20 protection when used with cable of diameter 22 mm or greater.

Finger guards are compatible with models ASA4.0-A 0184B – ASA4.0-A 0580B.

3.7.4 RemoteDrive Management Software

RemoteDrive PC software allows real-time integrated management of ASA 4.0 Advanced soft starters as well as all other Santerno products. RemoteDrive can monitor, control and program the starter across the network.

- RemoteDrive must connect to the ASA 4.0 Advanced via a Modbus RTU card.
- RemoteDrive supports networks of up to 247 devices.

3.7.5 Soft Starter Management Software

PC software can provide real-time or offline management of soft starters.

- For real-time management in a network of up to 254 starters, the software must connect to the soft starter via a Modbus TCP or Modbus RTU card. The software can monitor, control and program the starter across the network.
- The software can be used to program the starter via the USB port on the pumping smart card.
- For offline management, a configuration file generated in the software can be loaded into the starter via the USB port.

3.8 Main Contactor

A main contactor is recommended to protect the soft starter from voltage disturbances on the network, while stopped. Select a contactor with an AC3 rating greater than or equal to the full load current rating of the connected motor.

Use the main contactor output (33, 34) to control the contactor.



WARNING

When connecting the ASA 4.0 Advanced in inside delta configuration, always install a main contactor or shunt trip circuit breaker.


3.9 Circuit Breaker

A shunt trip circuit breaker may be used instead of a main contactor to isolate the motor circuit in the event of a soft starter trip. The shunt trip mechanism must be powered from the supply side of the circuit breaker or from a separate control supply.

3.10 Power Factor Correction

If power factor correction is used, a dedicated contactor should be used to switch in the capacitors.

To use the ASA 4.0 Advanced to control power factor correction, connect the PFC contactor to a programmable relay set to Run. When the motor reaches full speed, the relay will close and power factor correction will be switched in. Do not use the soft starter relay output to directly switch in power factor correction.

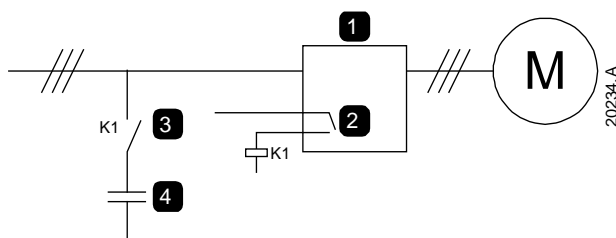

1	Soft starter
2	Programmable output (set = Run)
3	Power factor correction contactor
4	Power factor correction



CAUTION

Power factor correction capacitors must be connected to the input side of the soft starter. Connecting power factor correction capacitors to the output side will damage the soft starter.

3.11 Short Circuit Protection Devices (SCPD)

Fuses may be installed to protect the soft starter or the installation.

3.11.1 Type 1 Coordination

Type 1 coordination requires that, in the event of a short circuit on the output side of a soft starter, the fault must be cleared without risk of injury to personnel. There is no requirement that the soft starter must remain operational after the fault.

HRC fuses (such as Ferraz/Mersen AJT fuses) can be used for Type 1 coordination according to IEC 60947-4-2 standard.

3.11.2 Type 2 Coordination

Type 2 coordination requires that in the event of a short circuit on the output side of a soft starter, the fault must be cleared without risk of injury to personnel or damage to the soft starter.

Semiconductor fuses for Type 2 circuit protection are additional to HRC fuses or MCCBs that form part of the motor branch circuit protection.



CAUTION

DC Brake: A high brake torque setting can result in peak currents up to motor DOL being drawn while the motor is stopping. Ensure protection fuses installed in the motor branch circuit are selected appropriately.



CAUTION

Integral solid state short circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

3.12 IEC Coordination with Short Circuit Protection Devices

These fuses were selected based on start current of 300% FLC for 10 seconds.

	Nominal Rating (A)	SCR I²t (A²s)	Type 1 coordination 480 VAC, 65 kA Bussmann NH fuse links	Type 2 coordination 690 VAC, 65 kA Bussmann DIN 43 653
ASA4.0-A 0024B	24	1150	40NHG000B	170M3010
ASA4.0-A 0042B	42	7200	63NHG000B	170M3013
ASA4.0-A 0052B	52		80NHG000B	
ASA4.0-A 0064B	64	15000	100NHG000B	170M3014
ASA4.0-A 0069B	69			
ASA4.0-A 0105B	105	80000	160NHG00B	170M3015
ASA4.0-A 0115B	115			170M3016
ASA4.0-A 0135B	135	125000		
ASA4.0-A 0184B	184	320000	250NHG2B	170M3020
ASA4.0-A 0200B	200		315NHG2B	
ASA4.0-A 0229B	229			170M3021
ASA4.0-A 0250B	250			
ASA4.0-A 0352B	352	202000	355NHG2B	170M6009
ASA4.0-A 0397B	397		400NHG2B	
ASA4.0-A 0410B	410	320000	425NHG2B	170M6010
ASA4.0-A 0550B	550	781000	630NHG3B	170M6012
ASA4.0-A 0580B	580			

3.13 UL Coordination with Short Circuit Protection Devices

3.13.1 Standard Fault Short Circuit Current Ratings

Suitable for use on a circuit capable of delivering not more than the stated level of amperes (symmetrical rms, refer ##1 in table), 600 VAC maximum.

Maximum fuse rating (A) – Standard fault short circuit current

Model	Nominal Rating (A)	3 cycle short cct rating @600 VAC ##1 †
ASA4.0-A 0024B	24	5 kA
ASA4.0-A 0042B	42	
ASA4.0-A 0052B	52	10 kA
ASA4.0-A 0064B	64	
ASA4.0-A 0069B	69	
ASA4.0-A 0105B	105	
ASA4.0-A 0115B	120	
ASA4.0-A 0135B	135	
ASA4.0-A 0184B	184	18 kA
ASA4.0-A 0200B	225	
ASA4.0-A 0229B	229	
ASA4.0-A 0250B	250	
ASA4.0-A 0352B	352	
ASA4.0-A 0397B	397	
ASA4.0-A 0410B	410	30 kA
ASA4.0-A 0550B	550	
ASA4.0-A 0580B	580	

† Suitable for use in a circuit with the prospective current noted, when protected by any Listed fuses or Listed circuit breakers sized according to the NEC.

3.13.2 High Fault Short Circuit Current Ratings

Maximum fuse rating (A) – High fault short circuit current

Suitable for use on a circuit capable of delivering not more than 65,000 rms symmetrical amperes, 480 VAC maximum, when protected by fuses of the stated class and rating (refer ##2 and ##3 in table).

Model	Nominal Rating (A)	Short Circuit Rating @ 480 VAC max.	Listed fuse rating (A) ##3	Fuse class ##2
ASA4.0-A 0024B	24	65 kA	30	Any (J, T, K-1, RK1, RK5)
ASA4.0-A 0042B	42		50	
ASA4.0-A 0052B	52		60	
ASA4.0-A 0064B	64		80	
ASA4.0-A 0069B	69		80	
ASA4.0-A 0105B	105		125	J, T, K-1, RK1
ASA4.0-A 0115B	120		125	
ASA4.0-A 0135B	135		150	
ASA4.0-A 0184B	184		200	J, T
ASA4.0-A 0200B	225		225	
ASA4.0-A 0229B	229		250	
ASA4.0-A 0250B	250		300	Any (J, T, K-1, RK1, RK5)
ASA4.0-A 0352B	352		400	
ASA4.0-A 0397B	397		450	
ASA4.0-A 0410B	410		450	
ASA4.0-A 0550B	550		600	
ASA4.0-A 0580B	580		600	

Circuit breakers – High fault short circuit current

Suitable for use on a circuit capable of delivering not more than 65,000 rms symmetrical amperes, 480 VAC maximum, when protected by circuit breaker models noted in ##4, ##5 or ##6.

Model	Nominal Rating (A)	Breaker 1: Eaton (rating, A) ##4	Breaker 2: GE (rating, A) ##5	Breaker 3: LS (rating, A) ¹ ##6
ASA4.0-A 0024B	24	HFD3030 (30 A)	SELA36AT0060 (60 A)	UTS150H-xxU-040 (40 A)
ASA4.0-A 0042B	42	HFD3050 (50 A)		UTS150H-xxU-050 (50 A)
ASA4.0-A 0052B	52	HFD3060 (60 A)		UTS150H-xxU-060 (60 A)
ASA4.0-A 0064B	64	HFD3100 (100 A)	SELA36AT0150 (150 A)	UTS150H-xxU-100 (100 A)
ASA4.0-A 0069B	69			UTS150H-xxU-125 (125 A)
ASA4.0-A 0105B	105	HFD3125 (125 A)		UTS150H-xxU-150 (150 A)
ASA4.0-A 0115B	120			
ASA4.0-A 0135B	135	HFD3150 (150 A)		
ASA4.0-A 0184B	184	HFD3250 (250 A)	SELA36AT0250 (250 A)	UTS150H-xxU-250 (250 A)
ASA4.0-A 0200B	225			
ASA4.0-A 0229B	229			
ASA4.0-A 0250B	250	HFD3300 (300 A)	SELA36AT0400 (400 A)	UTS150H-xxU-300 (300 A)
ASA4.0-A 0352B	352	HFD3400 (400 A)	SELA36AT0600 (600 A)	UTS150H-xxU-400 (400 A)
ASA4.0-A 0397B	397			
ASA4.0-A 0410B	410	HFD3600 (600 A)		UTS150H-xxU-600 (600 A)
ASA4.0-A 0550B	550			UTS150H-xxU-800 (800 A)
ASA4.0-A 0580B	580			UTS150H-NGO-800

¹ For LS breakers, xx represents FM, FT or AT.

3.14 Fuse Selection for Type 2 Coordination

Type 2 coordination is achieved by using semiconductor fuses. These fuses must be able to carry motor start current and have a total clearing I^2t less than the I^2t of the soft starter SCRs.

When selecting semiconductor fuses for ASA 4.0 Advanced, use the I^2t values in the table.

For further information on selecting semiconductor fuses, contact your local distributor.

Model	SCR I^2t (A ² s)
ASA4.0-A 0024B	1150
ASA4.0-A 0042B	7200
ASA4.0-A 0052B	
ASA4.0-A 0064B	
ASA4.0-A 0069B	15000
ASA4.0-A 0105B	
ASA4.0-A 0115B	
ASA4.0-A 0135B	125000
ASA4.0-A 0184B	320000
ASA4.0-A 0200B	
ASA4.0-A 0229B	
ASA4.0-A 0250B	
ASA4.0-A 0352B	
ASA4.0-A 0397B	202000
ASA4.0-A 0410B	320000
ASA4.0-A 0550B	781000
ASA4.0-A 0580B	

3.15 Specifications

Supply

Mains voltage (L1, L2, L3)

ASA4.0-A xxxxB/5/xx	200~525 VAC ($\pm 10\%$)
ASA4.0-A xxxxB/7/xx	380~690 VAC ($\pm 10\%$)

Control voltage (A1, A2, A3)

ASA4.0-A xxxxB/x/12 (A1, A2)	110~120 VAC (+10%/-15%), 600 mA
ASA4.0-A xxxxB/x/12 (A2, A3)	220~240 VAC (+10%/-15%), 600 mA
ASA4.0-A xxxxB/x/14 (A1, A2)	24 VAC/VDC ($\pm 20\%$), 2.8 A

Mains frequency 50 Hz~60 Hz (± 5 Hz)

Rated insulation voltage to earth 600 VAC

Rated impulse withstand voltage 6 kV

Form designation Bypassed or continuous, semiconductor motor starter form 1

Short circuit capability

Coordination with semiconductor fuses Type 2

Coordination with HRC fuses Type 1

Electromagnetic capability (compliant with EU Directive 2014/35/EU)

EMC Immunity IEC 60947-4-2

EMC Emissions IEC 60947-4-2 Class B

Inputs

Input rating Active 24 VDC, 8 mA approx

Motor thermistor (B4, B5) Trip >3.6 k Ω , reset <1.6 k Ω

Outputs

Relay outputs 10 A @ 250 VAC resistive, 5A @ 250 VAC AC15 pf 0.3

Main contactor (33, 34) Normally Open

Relay output A (41, 42, 44) Changeover

Relay output B (53, 54) Normally Open

Analog output (21, 22)

Maximum load 600 Ω (12 VDC @ 20 mA)

Accuracy $\pm 5\%$

Environmental

Operating temperature -10 °C~60 °C, above 40 °C with derating

Storage temperature -25 °C~+ 60 °C


Operating Altitude 0~1000 m, above 1000 m with derating

Humidity 5%~95% Relative Humidity

Pollution degree Pollution Degree 3

Vibration	IEC 60068-2-6
Protection	
ASA4.0-A 0024B-ASA4.0-A 0135B	IP20
ASA4.0-A 0184B-ASA4.0-A 0580B	IP00
Heat dissipation	
During Start	4.5 watts per ampere
During Run	
ASA4.0-A 0024B-ASA4.0-A 0052B	≤ 35 watts approx
ASA4.0-A 0064B-ASA4.0-A 0135B	≤ 50 watts approx
ASA4.0-A 0184B-ASA4.0-A 0250B	≤ 120 watts approx
ASA4.0-A 0352B-ASA4.0-A 0580B	≤ 140 watts approx
Motor Overload Protection	
Default: The default settings of parameters 1D, 1E and 1F provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.	
Operational life (internal bypass contacts)	
.....	100 000 operations
Certification	
CE	EN 60947-4-2
EAC (formerly GOST)	TR TC 004/2011 and TR TC 020/2011
C-UL	C22.2 N° 60947-4-2
UL	UL 60947-4-2
Marine	Lloyds Marine No 1 Specification

3.16 Disposal Instructions

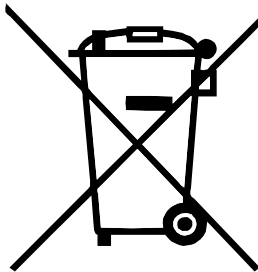

Equipment containing electrical components may not be disposed of together with domestic waste. It must be collected separately as electrical and electronic waste according to local and currently valid legislation.

4 Installation



WARNING

Do not apply mains voltage to the starter until all wiring is complete.



WARNING

Always apply control voltage before (or with) mains voltage.

4.1 Command Source

The ASA 4.0 Advanced can be started and stopped via the digital inputs, remote keypad, communication network, smart card or scheduled auto-start/stop. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

4.2 Setup Procedure Overview

1. Mount the soft starter (refer to *Physical Installation* on page 9 for details).
2. Connect control wiring (refer to *Input Terminals* on page 17 for details).
3. Apply control voltage to the starter.
4. Configure your application:
 1. Press **MENU** to open the Menu.
 2. Press ► to open the Quick Setup menu.
 3. Scroll through the list to find your application, then press ► to begin the configuration process (refer to *Quick Setup* on page 23 for details).
5. If your application is not listed in Quick Setup:
 1. Press ◀ to return to the Menu.
 2. Use ▼ to scroll to Main Menu and press ►.
 3. Scroll to Motor Details and press ►, then press ► again to edit parameter 1B *Motor Full Load Current*.
 4. Set parameter 1B to match the motor's full load current (FLC).
 5. Press ► to save the setting.
6. Close the Menu by pressing ◀ repeatedly.
7. (Optional) Use the built-in simulation tools to check that the control wiring is connected correctly (refer to *Run simulation* on page 24).
8. Power off the soft starter.
9. Connect the motor cables to starter output terminals 2/T1, 4/T2, 6/T3.
10. Connect mains supply cables to starter input terminals 1/L1, 3/L2, 5/L3 (refer to *Power Terminations* on page 20).

The soft starter is now ready to control the motor.

4.3 Inputs



CAUTION


The control inputs are powered by the soft starter. Do not apply external voltage to the control input terminals.




NOTE

Cables to the control inputs must be segregated from mains voltage and motor cabling.

4.3.1 Input Terminals

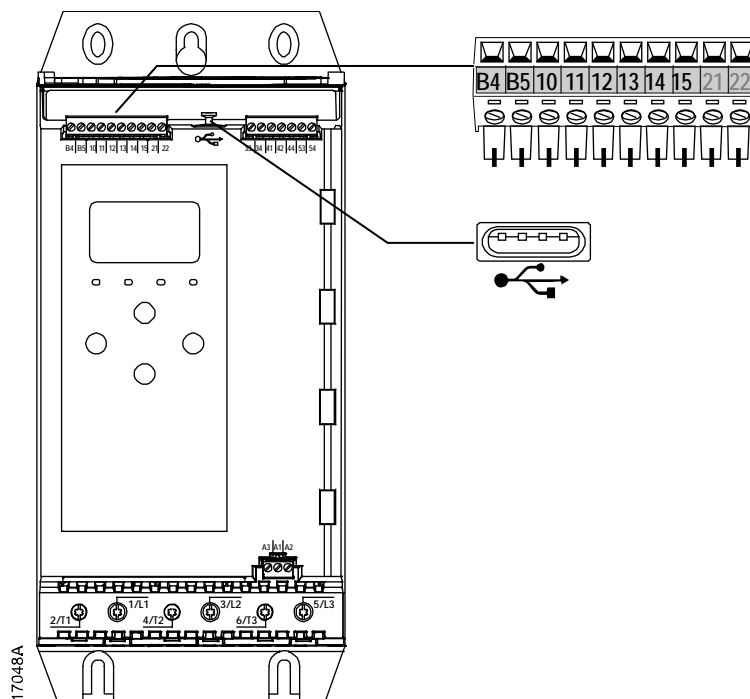

B4, B5	Motor thermistor input
10, 11	Reset input
11, 12	Start/stop input
13, 14	Programmable input A (default = Input Trip (N/O))
13, 15	Programmable input B (default = Input Trip (N/O))
	USB port

4.3.2 Motor Thermistor

Motor thermistors can be connected directly to the ASA 4.0 Advanced. The soft starter will trip when the resistance of the thermistor circuit exceeds approximately 3.6 k Ω or falls below 20 Ω .

The thermistors must be wired in series. The thermistor circuit should be run in screened cable and must be electrically isolated from earth and all other power and control circuits.




NOTE

The thermistor input is disabled by default, but activates automatically when a thermistor is detected. If thermistors have previously been connected to the ASA 4.0 Advanced but are no longer required, use the Thermistor Reset function to disable the thermistor. Thermistor Reset is accessed via the Setup Tools.

4.3.3 Start/Stop

The ASA 4.0 Advanced requires two-wire control.

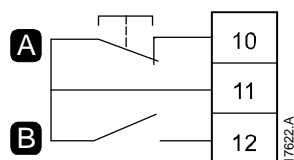

A	Reset
B	Start/Stop



WARNING

If the start input is closed when control voltage is applied, the starter will attempt to start.

Check that the start/stop input is open before applying control voltage.



NOTE

The ASA 4.0 Advanced will only accept commands from the control inputs if parameter 1A *Command Source* is set to Digital Input.

4.3.4 Reset/Starter Disable

The reset input (10, 11) is normally closed by default. The ASA 4.0 Advanced will not perform a start if the reset input is open. The display will show "Not Ready".

If the reset input opens while the ASA 4.0 Advanced is running, the starter will remove power and allow the motor to coast to stop.



NOTE

The reset input can be configured for normally open or normally closed operation. Use parameter 71 *Reset/Enable Logic*.

4.3.5 Programmable Inputs

The programmable inputs (13, 14 and 13, 15) allow external equipment to control the starter.


The operation of the programmable inputs is controlled by parameters 7A~7H.

4.3.6 USB Port

The USB port can be used to upload a configuration file, or download parameter settings and event log information from the starter. Refer to *USB Save & Load* on page 25 for details.

4.4 Outputs

4.4.1 Output Terminals

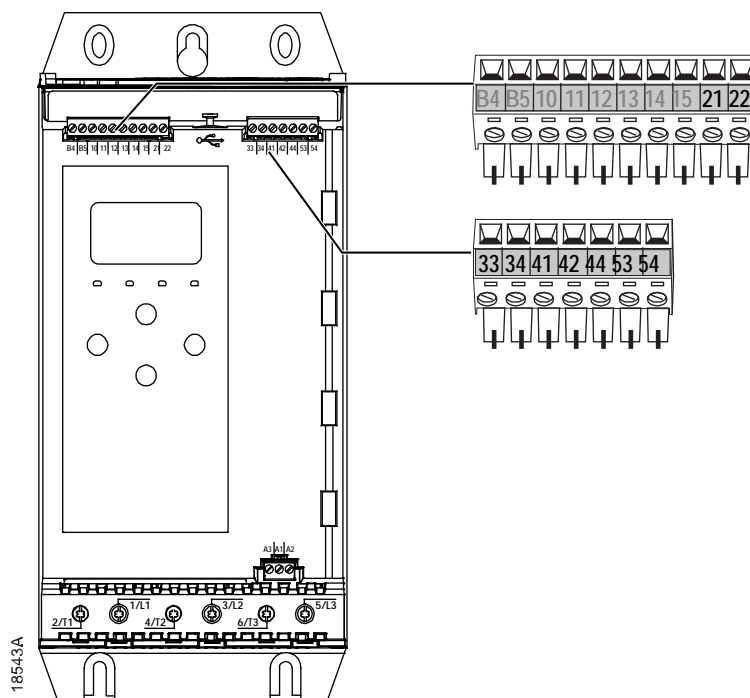

21, 22	Analog output
33, 34	Main contactor output
41, 42, 44	Relay output A (default = Run)
53, 54	Relay output B (default = Run)

4.4.2 Analog Output

The ASA 4.0 Advanced has an analog output, which can be connected to associated equipment to monitor motor performance.

The operation of the analog output is controlled by parameters 9A-9D.

4.4.3 Main Contactor Output

The main contactor output (33, 34) closes as soon as the soft starter receives a start command and remains closed while the soft starter is controlling the motor (until the motor starts a coast to stop, or until the end of a soft stop). The main contactor output will also open if the soft starter trips.



CAUTION

Some electronic contactor coils are not suitable for direct switching with PCB mount relays. Consult the contactor manufacturer/supplier to confirm suitability.


4.4.4 Programmable Outputs

The programmable outputs (41, 42, 44 and 53, 54) can report the status of the starter, or can be used to control associated equipment.

The operation of the programmable outputs is controlled by parameters 8A-8F.

4.5 Control Voltage

4.5.1 Control Voltage Terminals

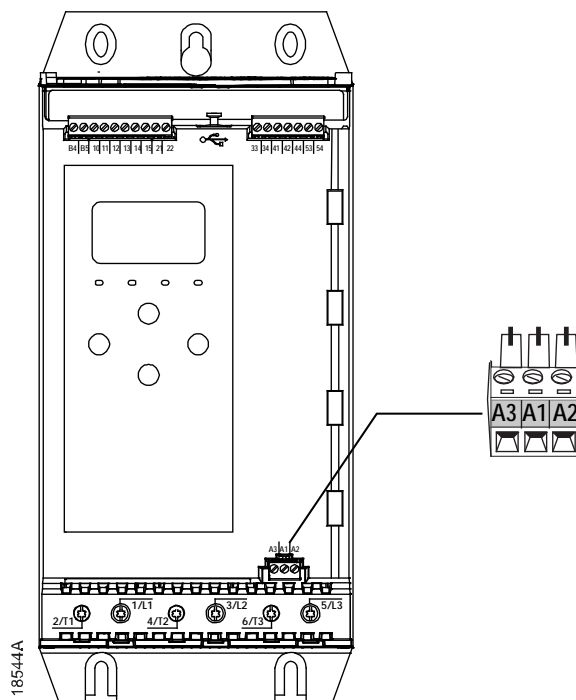

Connect the control supply according to the supply voltage being used.

- ASA4.0-A xxxxB/x/12 (110-120 VAC): A1, A2
- ASA4.0-A xxxxB/x/12 (220-240 VAC): A2, A3
- ASA4.0-A xxxxB/x/14 (24 VAC/VDC): A1, A2

4.5.2 UL Compliant Installation

For models ASA4.0-A 0184B to ASA4.0-A 0580B to be UL compliant, supplementary or branch overcurrent protection must be used on the control circuit supply (A1, A2, A3), in accordance with the electrical code applicable at the installation location.

4.6 Power Terminations







NOTE

Some units use aluminium busbars. When connecting power terminations, we recommend cleaning the surface contact area thoroughly (using an emery or stainless steel brush) and using an appropriate jointing compound to prevent corrosion.

The power input and output terminals are at the bottom of the unit.

- Models ASA4.0-B 0024B-ASA4.0-B 0135B use cage clamps. Use only copper stranded or solid conductors, rated for 75 °C or higher.
- Models ASA4.0-B 0184B-ASA4.0-B 0580B use busbars. Use copper or aluminium conductors, stranded or solid, rated for 60 °C/75 °C.

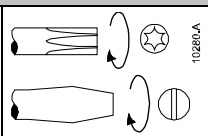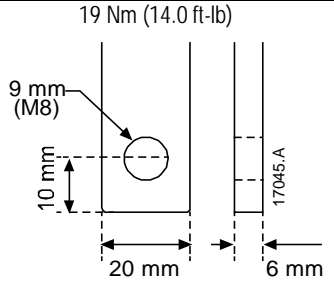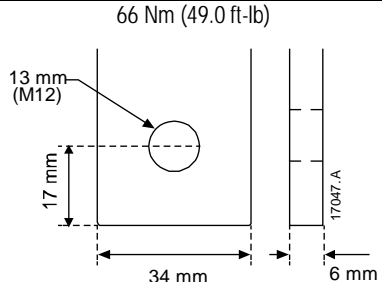ASA4.0-A 0024B-ASA4.0-A 0135B	
 <p>Cable size: 6-70 mm² (AWG 10-2/0) Torque: 4 Nm (2.9 ft-lb)</p> <p>14 mm (0.55 inch)</p>	 <p>Torx T20 x 150 Flat 7 mm x 150</p>
ASA4.0-A 0184B-ASA4.0-A 0250B	ASA4.0-A 0352B-ASA4.0-A 0580B
 <p>19 Nm (14.0 ft-lb)</p> <p>9 mm (M8)</p> <p>10 mm</p> <p>20 mm</p> <p>6 mm</p> <p>17045.A</p>	 <p>66 Nm (49.0 ft-lb)</p> <p>13 mm (M12)</p> <p>17 mm</p> <p>34 mm</p> <p>6 mm</p> <p>17047.A</p>



NOTE

If the installation requires large diameter cables, it is possible to complete each termination with two smaller cables, one on each side of the busbar.

4.6.1 UL Compliant Installation

For models ASA4.0-A 0184B to ASA4.0-A 0580B to be UL compliant, you must use the recommended pressure terminal/connector.

Model	Recommended lugs part No.
ASA4.0-A 0184B	OPHD 185-10
ASA4.0-A 0200B	
ASA4.0-A 0229B	
ASA4.0-A 0250B	
ASA4.0-A 0352B	OPHD 150-12
ASA4.0-A 0397B	
ASA4.0-A 0410B	
ASA4.0-A 0550B	OPHD 240-12
ASA4.0-A 0580B	

4.6.2 Motor Connection


The ASA 4.0 Advanced can be connected to the motor in-line or inside delta (also called three-wire and six-wire connection). When connecting in inside delta, enter the motor full load current (FLC) for parameter 1B. The ASA 4.0 Advanced will automatically detect whether the motor is connected in-line or inside delta and will calculate the correct inside delta current level.



NOTE


If the starter is not correctly detecting the motor connection, use parameter 20F *Motor Connection*.

In-line installation

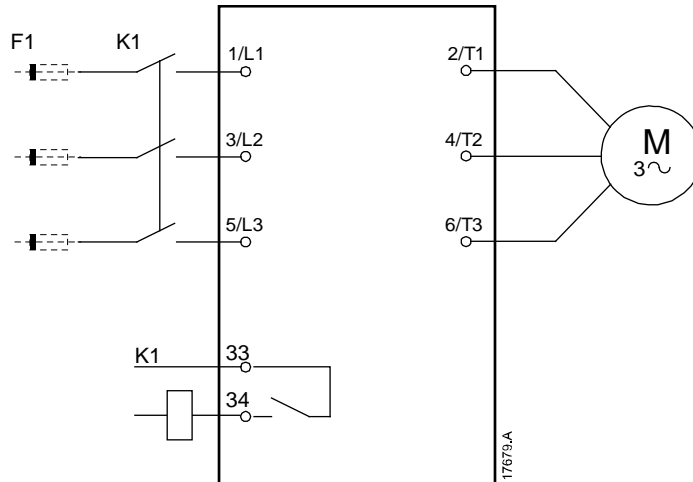

K1	Main contactor (strongly recommended)
F1	Fuses or circuit breaker (optional)
33, 34	Main contactor output

Inside delta installation

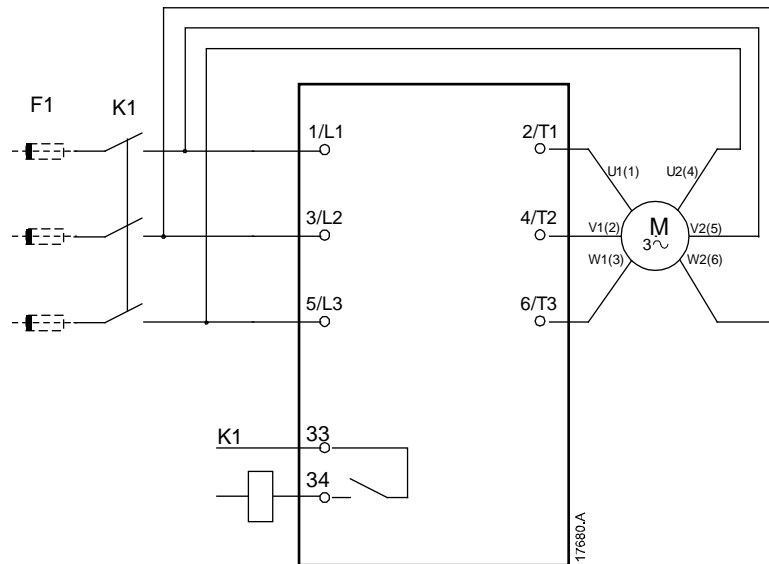


K1	Main contactor
F1	Fuses or circuit breaker (optional)
33, 34	Main contactor output

4.7 Typical Installation

The ASA 4.0 Advanced is installed with a main contactor (AC3 rated). Control voltage must be supplied from the input side of the contactor.

The main contactor is controlled by the main contactor output (33, 34).

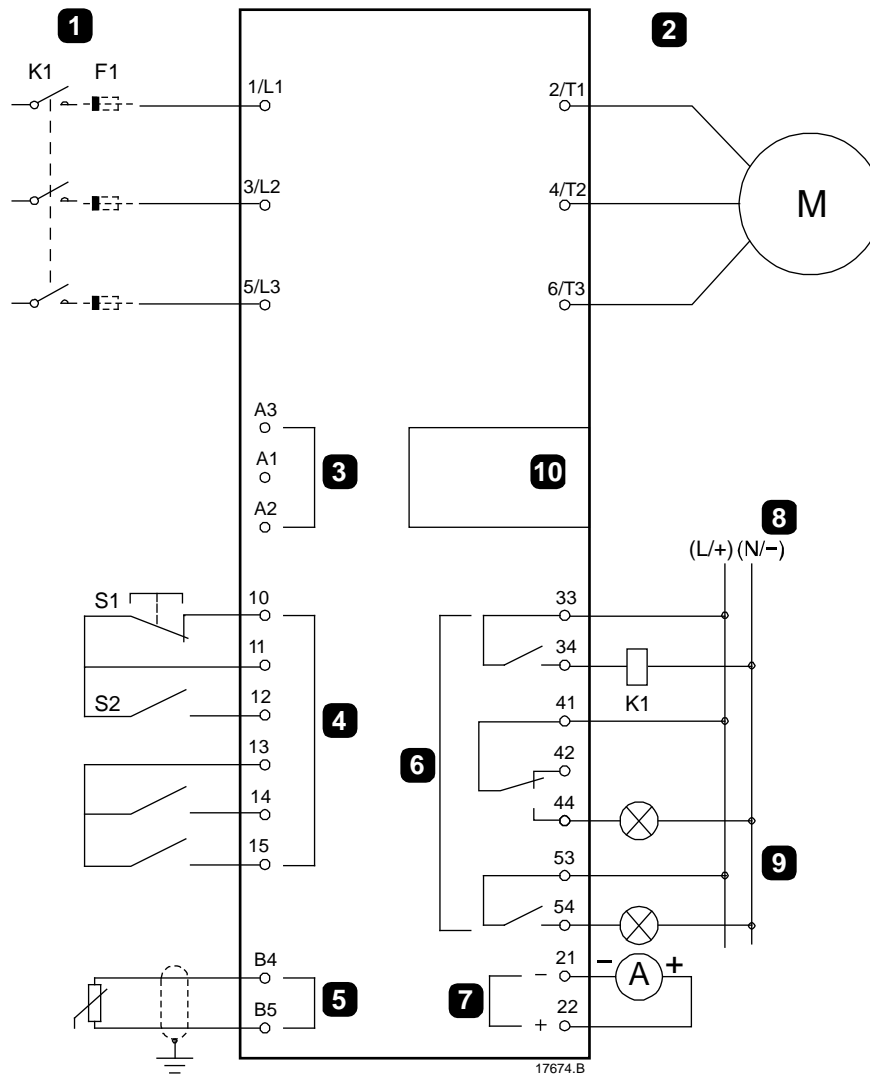

1	Three-phase supply
2	Motor
3	Control voltage (soft starter)
4	Digital inputs
5	Motor thermistor input
6	Relay outputs
7	Analog output
8	Control voltage (external equipment)
9	Pilot lamps
10	Communications / Smart card expansion port

K1	Main contactor
F1	Semiconductor fuses (optional)
10, 11 (S1)	Reset
11, 12 (S2)	Start/Stop
13, 14	Programmable input A (default = Input Trip (N/O))
13, 15	Programmable input B (default = Input Trip (N/O))
B4, B5	Motor thermistor input
33, 34	Main contactor output
41, 42, 44	Relay output A (default = Run)
53, 54	Relay output B (default = Run)
21, 22	Analog output

4.8 Quick Setup

The Quick Setup Menu makes it easy to configure the ASA 4.0 Advanced for common applications. The ASA 4.0 Advanced guides you through the most common installation parameters, and suggests a typical setting for the application. You can adjust each parameter to suit your exact requirements.

All other parameters remain at default values. To change other parameter values or review the default settings, use the menu (refer to *Parameter List* for details).

Always set parameter 1B *Motor Full Load Current* to match the motor's nameplate full load current.

Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%)	Current Limit (%)	Adaptive Start Profile	Stop Mode	Stop Time (seconds)	Adaptive Stop Profile
Pump Centrifugal	Adaptive Control	10	200	500	Early accel.	Adaptive Control	15	Late decel.
Pump bore	Adaptive Control	3	200	500	Early accel.	Adaptive Control	3	Late decel.
Pump Hydraulic	Constant Current	2	200	350	n/a	Coast To Stop	n/a	n/a
Fan Damped	Constant Current	2	200	350	n/a	Coast To Stop	n/a	n/a
Fan Undamped	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a
Compressor Screw	Constant Current	2	200	400	n/a	Coast To Stop	n/a	n/a
Compressor Recip	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a
Conveyor	Constant Current	5	200	450	n/a	Coast To Stop	n/a	n/a
Bow thruster	Constant Current	5	100	400	n/a	Coast To Stop	n/a	n/a
Bandsaw	Constant Current	2	200	450	n/a	Coast To Stop	n/a	n/a



NOTE

The Adaptive Start and Stop Profile settings only apply when using Adaptive Control. The settings are ignored for all other start and stop modes.

5 Setup Tools

Setup Tools includes options to load or save parameters to a backup file, set the starter's network address, check the status of the inputs and outputs, reset the thermal models or test operation using the Run Simulation.

To access the Setup Tools, press **MENU** to open the Menu then select Setup Tools.

5.1 Set Date and Time

To set the date and time:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Set Date & Time.
3. Press the ► button to enter edit mode.
4. Press the ► and ◀ buttons to select which part of the date or time to edit.
5. Use the ▲ and ▼ buttons to change the value.
6. Press ► after the last digit to save the setting. When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.

5.2 Command Source

The ASA 4.0 Advanced can be started and stopped via the digital inputs, remote keypad, communication network, smart card or scheduled auto-start/stop. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

If the remote keypad is installed, the **LOCAL/REMOTE** button provides shortcut access to the Command Source function in Setup Tools.

5.3 Commissioning

Commissioning lets the starter be started and stopped via the local keypad. Use the ▲ and ▼ buttons to select a function, then press ► to send the selected command to the starter. The available functions are:

- Quick stop (coast to stop)/Reset
- Start
- Stop

5.4 Run simulation

The run simulation simulates a motor starting, running and stopping to confirm that the soft starter and associated equipment have been installed correctly.



NOTE

The soft starter must be disconnected from mains voltage.

The simulation is only available when the soft starter is in Ready state.

To use the run simulation:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Run Simulation and press ►.
3. Apply a start command from the selected command source. The ASA 4.0 Advanced simulates its pre-start checks and closes the main contactor relay. The Run LED flashes.



NOTE

If mains voltage is connected, an error message is shown.

4. Press ►. The ASA 4.0 Advanced simulates starting. The Run LED flashes.
5. Press ►. The ASA 4.0 Advanced simulates running.

RUN SIMULATION READY APPLY START SIGNAL
RUN SIMULATION PRE-START CHECKS MENU TO CONTINUE
RUN SIMULATION ATTENTION! REMOVE MAINS VOLTS MENU TO CONTINUE
RUN SIMULATION STARTING X:XXS MENU TO CONTINUE
RUN SIMULATION RUNNING APPLY STOP SIGNAL

6. Apply a stop command from the selected command source. The ASA 4.0 Advanced simulates stopping. The Run LED flashes.
7. Press ►. The Ready LED flashes and the main contactor relay opens.
8. Press ►. The ASA 4.0 Advanced activates then deactivates each programmable output.
9. Press ► to return to the Setup Tools.

```
RUN SIMULATION
STOPPING X:XXS
MENU TO CONTINUE
```

```
RUN SIMULATION
STOPPED
MENU TO CONTINUE
```

```
RUN SIMULATION
PROG RELAY A
ON
MENU TO CONTINUE
```

5.5 Load/Save Settings

Load/Save Settings allows users to:

- Reset the ASA 4.0 Advanced parameters to default values
- Load parameter settings from an internal file
- Save the current parameter settings to an internal file

The internal file contains default values until a user file is saved.

To load or save parameter settings:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Load/Save Settings and press the ► button.
3. Scroll to the required function and press the ► button.
4. At the confirmation prompt, select YES to confirm or NO to cancel, then press ► to proceed.

```
LOAD/SAVE SETTINGS
LOAD DEFAULTS
LOAD USER SET
SAVE USER SET
```

```
LOAD DEFAULTS
NO
YES
```

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.

5.6 USB Save & Load

The USB Save & Load menu lets you:

- Save parameter settings and all event log entries to an external file (CSV format)
- Save parameter settings to an external file (proprietary format)
- Load parameter settings from a previously saved external file
- Load custom messages to display on the keypad when a programmable input is active



NOTE

The ASA 4.0 Advanced supports FAT32 file systems. The ASA 4.0 Advanced USB functions are not compatible with NTFS file systems.

5.6.1 Save & Load Procedure

1. Connect the external drive to the USB port.
2. Press **MENU** to open the menu then select Setup Tools.
3. Scroll to USB Save & Load and press the ► button.
4. Scroll to the required function and press the ► button.
5. At the confirmation prompt, select YES to confirm or NO to cancel, then press ► to proceed.

```
USB SAVE & LOAD
SAVE PARAMS AND LOGS
SAVE MASTER PARAMS
LOAD MASTER PARAMS
```

```
SAVE PARAMS AND LOGS
NO
YES
```

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.


5.6.2 File Locations and Formats

Save Parameters and Logs: The ASA 4.0 Advanced will create a directory at the top level of the USB drive, named with the soft starter's serial number. The event log and parameter settings are saved as individual CSV files, and the soft starter's software and system information are saved to a text file.

Save Master Parameters: The ASA 4.0 Advanced will create a file called Master_Parameters.par, in the top level of the USB drive.

Load Master Parameters: The ASA 4.0 Advanced will load the file Master_Parameters.par from the top level of the USB drive. This file can be created or edited using WinMaster management software.

Load Custom Message: The ASA 4.0 Advanced will load the files Custom_Message_A.txt and Custom_Message_B.txt from the top level of the USB drive.

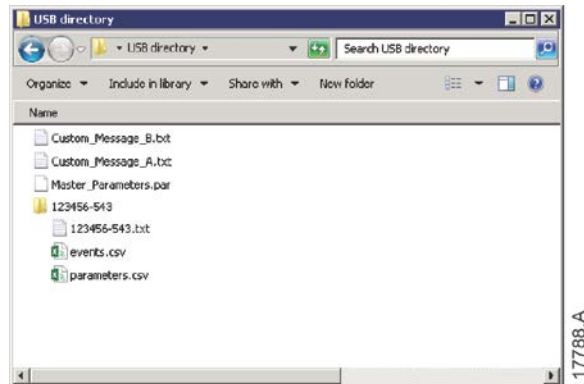

5.7 Auto-Start/Stop

The starter can be configured to automatically start and/or stop the motor at a particular time, or run it in cycles of a specified duration.

The Auto-Start/Stop option in Setup Tools gives quick access to the auto-start/stop parameters.

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Auto-Start/Stop and press the ► button.
3. Scroll to the required function and press the ► button.
4. Adjust the settings as required:
Press the ► and ◀ buttons to select which information to edit.
Use the ▲ and ▼ buttons to change the value.

```
AUTO-START/STOP
START/STOP MODE
START/STOP SUNDAY
START/STOP MONDAY
```

```
START/STOP SUNDAY
START/STOP DISABLE
START TIME:      00:00
STOP TIME:       00:00
```

5. To save changes, press the ► button. The ASA 4.0 Advanced will confirm the changes.
To cancel changes, press the ◀ button.

5.8 Network Address

To use the ASA 4.0 Advanced on an Ethernet network, separate addresses must be configured for:

- IP Address
- Gateway Address
- Subnet Mask

To set the network addresses:

1. Press **MENU** to open the menu then select Setup Tools.
2. Scroll to Network Address and press the ► button.
3. Scroll to the required function and press the ► button.
4. The first digit of the address will be highlighted.
5. Use ◀ and ► to select which digit to alter. Use the ▲ and ▼ buttons to change the value.
6. Press ► after the last digit to save the setting.

```
SET IP ADDRESS
192.168.000.002
```

When the action has been completed, the screen will briefly display a confirmation message, then return to the previous menu level.



NOTE

The network address can also be set using parameters 12H-12S.




NOTE

To configure the ASA 4.0 Advanced for use with other communication protocols, use parameters 12A-12G.

5.9 Digital I/O State

The top line of the screen shows the start/stop, reset and programmable inputs.
The bottom line of the screen shows the fixed Main Contactor output, then programmable outputs A and B.

DIGITAL I/O STATE
INPUTS: 00000000
OUTPUTS: 00000000

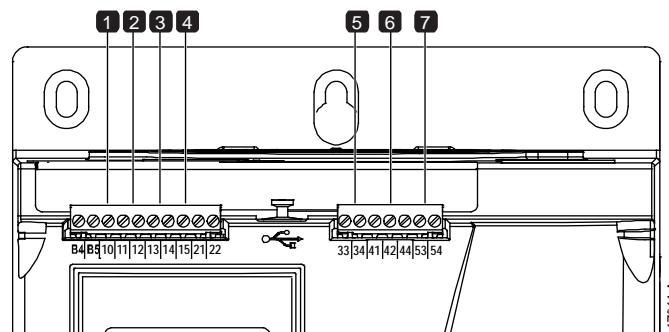

1	10, 11: Reset input
2	11, 12: Start/stop input
3	13, 14: Programmable input A
4	13, 15: Programmable input B

5	33, 34: Main contactor output
6	41, 42, 44: Relay output A
7	53, 54: Relay output B

5.10 Analog I/O State

The top line of the screen shows the state of the motor thermistor input.
The bottom line of the screen shows the value of the analog output.

ANALOG I/O STATE
THERMISTOR: 0
4-20MA OUTPUT: 04.0 MA

Thermistor input:

S = SHORT
H = HOT
C = COLD
O = OPEN

5.11 Serial Number & Rating

The top line of the screen shows the product name.
The middle line shows the unit's serial number.
The bottom line of the screen shows the model number.

SERIAL NUMBER & RATING
ASA 4.0 ADVANCED
123456-123
0410-5-S1-12

5.12 Software Versions

The software versions screen reports the version of each software component in the starter:

- user interface
- motor control
- remote keypad (if connected)
- parameter list
- bootloader
- expansion card (if fitted)



NOTE

Updated software, including alternative languages, can be loaded into the starter via the USB port if required. Contact your local supplier for further information.

5.13 Thermistor Reset

The thermistor input is disabled by default, but activates automatically when a thermistor is detected. If thermistors have previously been connected to the ASA 4.0 Advanced but are no longer required, use the Thermistor Reset function to disable the thermistor.

5.14 Reset Thermal Model

The soft starter's thermal modelling software constantly monitors the motor's performance. This allows the starter to calculate the motor's temperature and ability to start successfully at any time.

The thermal model can be reset if required.



CAUTION

Resetting the motor thermal model will compromise thermal model protection and may compromise motor life. Only reset the thermal model in an emergency.

6 Logs

The Logs Menu provides information on events, trips and starter performance.

To access the Logs Menu on the local keypad, press **MENU** to open the Menu then select Logs. On the remote keypad, press **LOGS**.

6.1 Event Log

The Event Log stores details of the starter's most recent trips, warnings, and operations (including starts, stops and configuration changes).

Event 1 is the most recent and event 384 is the oldest stored event.



NOTE

The event log can be exported to an external file for analysis away from the starter. Refer to *USB Save & Load* on page 25 for details.

6.2 Counters

The counters store statistics on the starter's operation:

- Hours run (lifetime and since counter last reset)
- Number of starts (lifetime and since counter last reset)
- Number of times the thermal model has been reset

To view the counters:

1. Open the Logs.
2. Scroll to counters and press ►.
3. Use the ▲ and ▼ buttons to scroll through the counters. Press ► to view details.
4. To reset a counter, press ► then use the ▲ and ▼ buttons to select Reset/Do Not Reset. Press **STORE** to confirm the action.

To close the counter and return to the Logs, press ►.

6.3 QR Code

The ASA 4.0 Advanced can generate a QR code which allows a smartphone to display key information about the starter, including serial number, firmware versions and installed options, plus details of the starter's three most recent trips. This information can be useful when requesting assistance from your local supplier.





NOTE

You must install the soft starter support app in order to read the QR code. Contact your local supplier for further information.

7 Keypad and Feedback

7.1 The Keypad

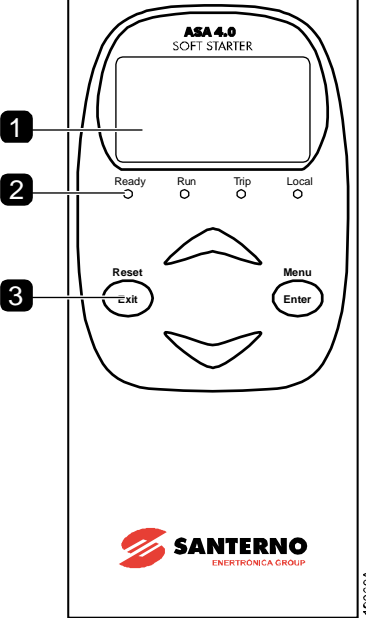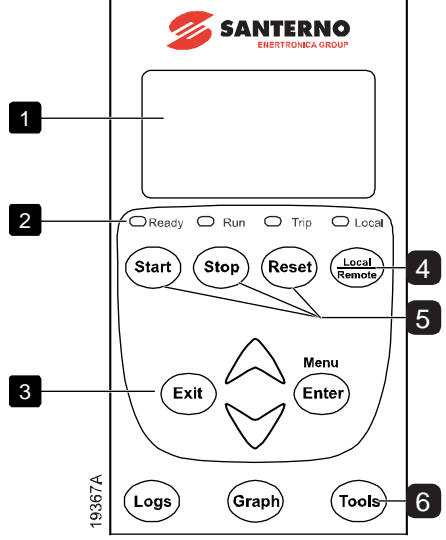Local keypad	Remote keypad (if installed)
	
1	Four-line display for status and programming details.
2	Status LEDs
3	Menu navigation buttons: ◀: Exit the menu or parameter, or cancel a parameter change. On the local keypad, this button also resets a trip. ▶: Enter a menu or parameter, or save a parameter change. ▲ ▼: Scroll to the next or previous menu or parameter, change the setting of the current parameter or scroll through the status screens.
4	Shortcut to the command source menu in Setup Tools.
5	Soft starter local control buttons
6	Shortcut buttons for quick access to common tasks. LOGS: Open the Logs Menu. GRAPHS: Select which graph to view, or pause/restart the graph (hold longer than 0.5 seconds) TOOLS: Open the Setup Tools.

7.2 Remote Keypad

The remote keypad can be used to control the soft starter if parameter 1A *Command Source* is set to 'Remote Keypad'.

- If the remote keypad is not selected as the command source, the **START**, **STOP** and **RESET** buttons will have no effect.
- The menu navigation buttons and display on the remote keypad are always active.
- If a button is pressed on the starter's local keypad, the display on the remote keypad will update to match.



NOTE

The remote keypad can be safely connected or removed while the starter is running. It is not necessary to remove mains or control voltage.



NOTE

If parameter 1A *Command Source* is set to Remote Keypad, removing the remote keypad will cause a trip.

7.3 Lighten/Darken the Display

The backlight on the display can be adjusted:


- to lighten the display, hold down the ◀ button and press the ▲ key
- to darken the display, hold down the ◀ button and press the ▼ key



NOTE

The local and remote keypads can be adjusted independently.

7.4 Starter status LEDs

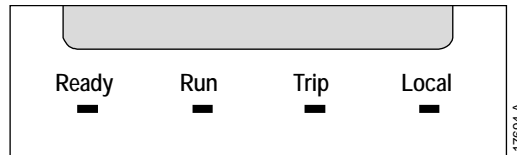

LED name	On	Flashing
Ready	The motor is stopped and the starter is ready to start.	The motor is stopped and the starter is not ready to start: <ul style="list-style-type: none"> waiting for the <i>Restart Delay</i> (parameter 5P) the thermal models indicate the starter and/or motor are too hot to start safely the reset input (10, 11) is open
Run	The motor is in run state (receiving full voltage).	The motor is starting or stopping.
Trip	The starter has tripped.	The starter is in warning state.
Local	The starter is being controlled via a remote keypad.	–


If all LEDs are off, the starter is not receiving control voltage.

7.5 Displays

The keypad displays a wide range of performance information about the soft starter. To scroll through the feedback screens, press the ▲ and ▼ buttons.

7.5.1 Starter information

At power-up, the starter information screen shows details of the starter's rating, software versions and serial number.

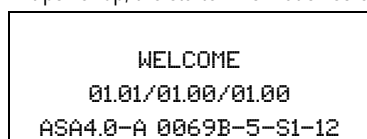


Software versions: user interface, motor control, remote keypad

Model code: current rating, mains voltage, frame size, control voltage

(remote keypad software version is only displayed when a remote keypad is connected)

7.5.2 Starter status screen




motor running current

Starter status

Parameter 10H *User Parameter 1* and parameter 10I *User Parameter 2*

7.5.3 Current


The current screen shows real-time line current on each phase.



7.5.4 Last Start Information


The last start information screen shows details of the most recent successful start:

- start duration (seconds)
- maximum start current drawn (as a percentage of motor full load current)
- calculated rise in motor temperature



7.5.5 User configurable screen

The programmable screen can be configured to show the most important information for the particular application. Use parameters 10J ~ 10M to select which information to display.

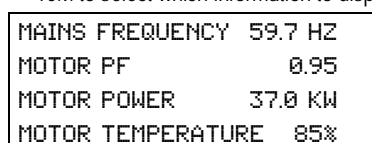


7.5.6 Date and Time

The date/time screen shows the current system date and time (24 hour format). For details on setting the date and time, refer to *Set Date and Time* on page 24.

7.5.7 Performance Graph

The performance graph provides a real-time display of operating performance. Use parameters 10B~10E to format the graph.

The display on the main keypad shows information for motor current.

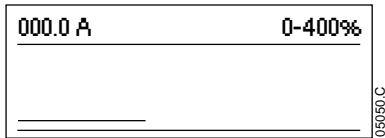

If a remote keypad is connected, press **GRAPHS** to change the graph data. The graph can show:

- motor current
- motor temperature
- motor pf
- analog input data from the smart card (if installed)

8 Operation

8.1 Start, Stop and Reset Commands

The ASA 4.0 Advanced can be started and stopped via the digital inputs, remote keypad, communication network, smart card or scheduled auto-start/stop. The command source can be set via the Setup Tools, or using parameter 1A *Command Source*.

- The ASA 4.0 Advanced will only accept Start and Reset commands from the designated command source.
- The ASA 4.0 Advanced will accept Stop commands from the designated command source, but can be forced to stop by opening the reset input, or by opening the start/stop input during an auto-start/stop cycle.
- The programmable input can be used to override the selected command source (refer to parameter 7A *Input A Function*).

8.2 Command Override

The programmable input (13, 14) can be used to override the command source, for situations where the normal control mechanism has been lost. Set parameter 7A *Input A Function* to the alternative command source (eg 'Command Override: Keypad').

While the input is active, the starter will only accept commands from the selected override source. To restore control to the command source selected in parameter 1A *Command Source*, reopen the input.

8.3 Auto-Start/Stop

The starter can be configured to automatically start and/or stop the motor at a particular time, or run it in cycles of a specified duration.



NOTE

Start delay, restart delay and auto-reset delay all apply to auto-start operation.

8.3.1 Clock mode

The starter can start and/or stop the motor once per day.

For clock mode to operate:

- parameter 4A *Auto-Start/Stop Mode* must be set to 'Enable'
- parameter 1A *Command Source* must be set to 'Clock'
- the reset input must be closed
- the start input (11, 12) must be active. This allows the ASA 4.0 Advanced to be stopped via the digital inputs in an emergency.

Clock mode operation is controlled by parameters 4D ~ 4X.

8.3.2 Timer mode

The starter can automatically stop the motor after a specified run time, then restart it after a specified off (stopped) time. The starter will repeat the cycle while the start signal remains active.

For timer mode to operate:

- parameter 4A *Auto-Start/Stop Mode* must be set to 'Enable'
- parameter 1A *Command Source* must be set to 'Timer'
- the reset input must be closed
- the first start must be commanded by a start signal

Timer mode operation is controlled by parameters 4B ~ 4C.

8.4 PowerThrough

PowerThrough allows the soft starter to control the motor even if the soft starter is damaged on one phase. The ASA 4.0 Advanced will use two-phase control techniques to soft start and soft stop the motor.



NOTE

The starter will trip on Lx-Tx Shorted on the first start attempt after control power is applied. PowerThrough will not operate if control power is cycled between starts.

- PowerThrough is only available with in-line installations. If the starter is installed inside delta, PowerThrough will not operate.
- PowerThrough remains active until '3-Phase Control Only' is reselected. While operating in PowerThrough, the trip LED will flash and the display will indicate '2 Phase - Damaged SCR'.

PowerThrough operation does not support Adaptive Control soft starting or soft stopping. In PowerThrough, the ASA 4.0 Advanced will automatically select constant current soft starting and timed voltage ramp soft stopping. If PowerThrough is enabled, parameters 2C and 2D must be set appropriately.



CAUTION

PowerThrough uses a two-phase soft start technology and additional care is required when sizing circuit breakers and protection. Contact your local supplier for assistance.

8.5 Emergency Mode

Emergency mode allows the ASA 4.0 Advanced to run the motor and ignore trip conditions.

Emergency mode is controlled via a programmable input (input A 13, 14 or input B 13, 15) and parameter *7A Input A Function/7E Input B Function* must be set to 'Emergency Mode'. A closed circuit across 13, 14 activates emergency mode. When the ASA 4.0 Advanced receives a start command, it will continue to run until a stop command is received, ignoring all trips and warnings.

Emergency mode can be used in conjunction with any command source.



NOTE

Although emergency mode operation satisfies the functionality requirements of Fire Mode, Santerno does not recommend its use in situations that require testing and/or compliance with specific standards as it is not certified.



CAUTION

Continued use of emergency mode is not recommended. Emergency mode may compromise the starter and/or motor life as all protections and trips are disabled.

Using the starter in emergency mode will void the product warranty.

8.6 Auxiliary Trip

An external trip circuit (such as a low pressure alarm switch for a pumping system) can be used to trip the soft starter and stop the motor. The external circuit is connected to a programmable input (input A 13, 14 or input B 13, 15). To control the behaviour of the trip, set the following parameters:

- Parameter *7A Input A Function*: select 'Input Trip (N/O)'.
- Parameter *7B Input A Trip*: set as required. For example, 'Run Only' limits the input trip to when the soft starter is running only.
- Parameter *7C Input A Trip Delay*: sets a delay between the input activating and the soft starter tripping.
- Parameter *7D Input A Initial Delay*: sets a delay before the soft starter monitors the state of the input, after the start signal. For example, a delay may be required to allow time for pipeline pressure to build up.
- Parameter *7J Input A Name*: select a name, eg 'Input A Trip' (optional).

8.7 Typical Control Methods

The requirements of an application differ between each installation, but the methods listed below are often a good starting point for common applications.

Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%FLC)	Current Limit (%FLC)	Stop Mode	Stop Time (seconds)
Bow thruster	Constant Current	5	100	400	Coast To Stop	n/a
Centrifuge (Separator)	Constant Current	1	200	450	Coast To Stop	n/a
Chipper	Constant Current	1	200	450	Coast To Stop	n/a
Compressor - reciprocating - loaded	Constant Current	1	200	450	Coast To Stop	n/a
Compressor - reciprocating - unloaded	Constant Current	1	200	400	Coast To Stop	n/a
Compressor - screw - loaded	Constant Current	1	200	400	Coast To Stop	n/a
Compressor - screw - unloaded	Constant Current	1	200	350	Coast To Stop	n/a
Conveyor - horizontal	Constant Current	5	200	400	TVR Soft Stop	10
Conveyor - inclined	Constant Current	2	200	450	Coast To Stop	n/a
Conveyor - vertical (bucket)	Constant Current	2	200	450	Coast To Stop	n/a
Crusher - cone	Constant Current	1	200	350	Coast To Stop	n/a
Crusher - jaw	Constant Current	1	200	450	Coast To Stop	n/a
Crusher - rotary	Constant Current	1	200	400	Coast To Stop	n/a
Debarker	Constant Current	1	200	350	Coast To Stop	n/a
Fan - axial (damped)	Constant Current	1	200	350	Coast To Stop	n/a
Fan - axial (undamped)	Constant Current	1	200	450	Coast To Stop	n/a
Fan - centrifugal (damped)	Constant Current	1	200	350	Coast To Stop	n/a
Fan - centrifugal (undamped)	Constant Current	1	200	450	Coast To Stop	n/a
Fan - high pressure	Constant Current	1	200	450	Coast To Stop	n/a
Mill - ball	Constant Current	1	200	450	Coast To Stop	n/a
Mill - hammer	Constant Current	1	200	450	Coast To Stop	n/a
Pump - bore	Adaptive Control (Early accel.)	3	n/a	500	Adaptive Control (Late decel.)	3
Pump - centrifugal	Adaptive Control (Early accel.)	10	n/a	500	Adaptive Control (Late decel.)	15


Application	Start Mode	Start Ramp Time (seconds)	Initial Current (%FLC)	Current Limit (%FLC)	Stop Mode	Stop Time (seconds)
Pump - Hydraulic	Constant Current	2	200	350	Coast To Stop	n/a
Pump - positive displacement	Adaptive Control (Const. accel.)	10	n/a	400	Adaptive Control (Const. decel.)	10
Pump - submersible	Adaptive Control (Early accel.)	5	n/a	500	Adaptive Control (Late decel.)	5
Saw - bandsaw	Constant Current	1	200	450	Coast To Stop	n/a
Saw - circular	Constant Current	1	200	350	Coast To Stop	n/a
Shredder	Constant Current	1	200	450	Coast To Stop	n/a

8.8 Soft Start Methods

8.8.1 Constant Current

Constant current is the traditional form of soft starting, which raises the current from zero to a specified level and keeps the current stable at that level until the motor has accelerated.

Constant current starting is ideal for applications where the start current must be kept below a particular level.

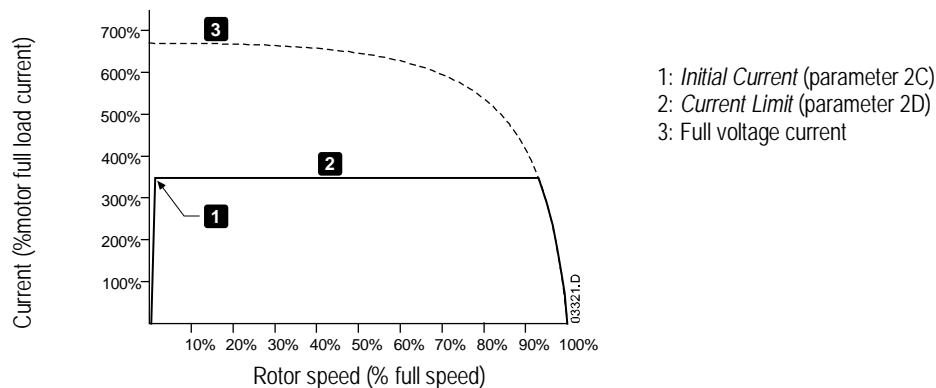


8.8.2 Constant Current with Current Ramp

Current ramp soft starting raises the current from a specified starting level (1) to a maximum limit (3), over an extended period of time (2).

Current ramp starting can be useful for applications where:

- the load can vary between starts (for example a conveyor which may start loaded or unloaded). Set the initial current (parameter 2C) to a level that will start the motor with a light load, and the current limit (parameter 2D) to a level that will start the motor with a heavy load.
- the load breaks away easily, but starting time needs to be extended (for example a centrifugal pump where pipeline pressure needs to build up slowly).
- the electricity supply is limited (for example a generator set), and a slower application of load will allow greater time for the supply to respond.

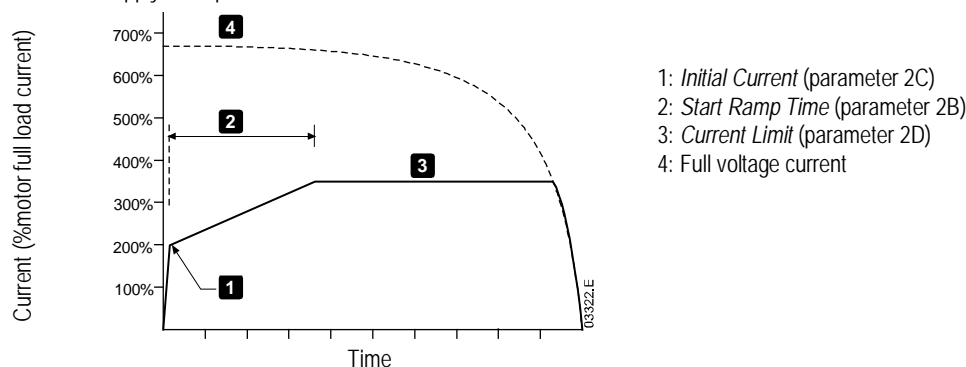


8.8.1 Adaptive Control for Starting

In an adaptive control soft start, the ASA 4.0 Advanced adjusts the current in order to start the motor within a specified time and using a selected acceleration profile.



NOTE

The ASA 4.0 Advanced will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

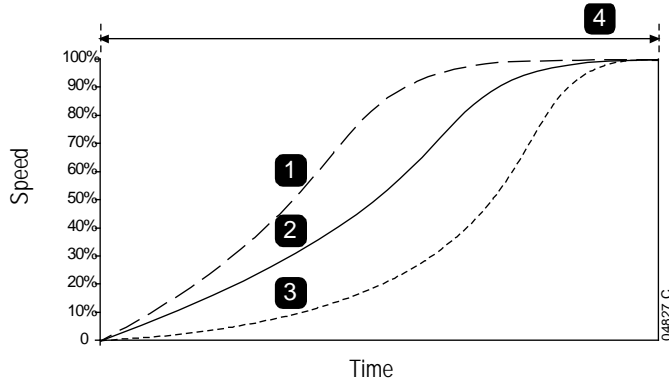

Adaptive Start Profile (parameter 2E):

1. Early Acceleration
2. Constant Acceleration
3. Late Acceleration
4. Start Ramp Time (parameter 2B)

Fine-tuning Adaptive Control

If the motor does not start or stop smoothly, adjust the adaptive control gain (parameter 2L). The gain setting determines how much the ASA 4.0 Advanced will adjust future adaptive control starts and stops, based on information from the previous start. The gain setting affects both starting and stopping performance.

- If the motor accelerates or decelerates too quickly at the end of a start or stop, increase the gain setting by 5%~10%.
- If the motor speed fluctuates during starting or stopping, decrease the gain setting slightly.




NOTE

The ASA 4.0 Advanced tunes Adaptive Control to match the motor. Changing the following parameters will reset Adaptive Control and the first start/stop cycle will use constant current start/timed voltage ramp stop: 1B Motor Full Load Current, 2D Current Limit, 2L Adaptive Control Gain.

8.8.2 Constant Current with Kickstart

Kickstart provides a short boost of extra torque at the beginning of a start, and can be used in conjunction with current ramp or constant current starting.

Kickstart can be useful to help start loads that require high breakaway torque but then accelerate easily (for example helical rotor pumps).

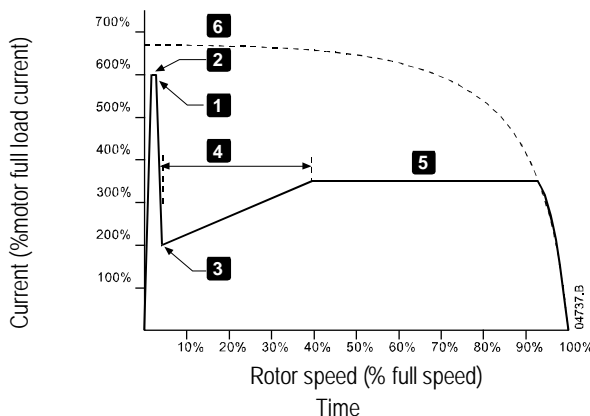

- 1: Kickstart Level (parameter 2G)
- 2: Kickstart Time (parameter 2F)
- 3: Initial Current (parameter 2C)
- 4: Start Ramp Time (parameter 2B)
- 5: Current Limit (parameter 2D)
- 6: Full voltage current

8.9 Stop Methods

8.9.1 Coast to Stop

Coast to stop lets the motor slow at its natural rate, with no control from the soft starter. The time required to stop will depend on the type of load.


8.9.2 Timed Voltage Ramp Soft Stop

Timed voltage ramp stopping reduces the voltage to the motor gradually over a defined time. This can extend the stopping time of the motor and may avoid transients on generator set supplies.



NOTE

The load may continue to run after the stop ramp is complete.

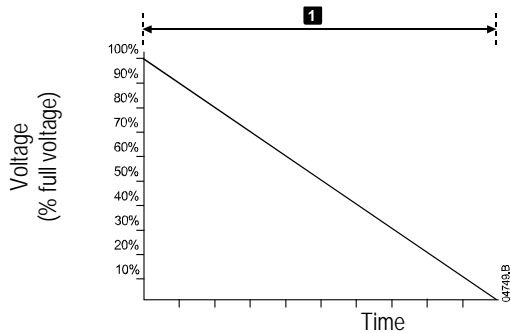

1: Stop Time (parameter 2J)

8.9.3 Adaptive Control for Stopping

In an adaptive control soft stop, the ASA 4.0 Advanced controls the current in order to stop the motor within a specified time and using a selected deceleration profile. Adaptive Control can be useful in extending the stopping time of low inertia loads.

If adaptive control is selected, the first soft stop will use timed voltage ramp. This allows the ASA 4.0 Advanced to learn the characteristics of the connected motor. This motor data is used by the ASA 4.0 Advanced during subsequent adaptive control stops.



NOTE


Adaptive control does not actively slow the motor down and will not stop the motor faster than a coast to stop. To shorten the stopping time of high inertia loads, use brake.



CAUTION

Adaptive Control controls the motor's speed profile, within the programmed time limit. This may result in a higher level of current than traditional control methods.

If replacing a motor connected to an ASA 4.0 Advanced programmed for Adaptive Control starting or stopping, the starter will need to learn the characteristics of the new motor. Change the value of parameter 1B *Motor Full Load Current* or parameter 2L *Adaptive Control Gain* to initiate the re-learning process. The next start will use constant current and the next stop will use timed voltage ramp.

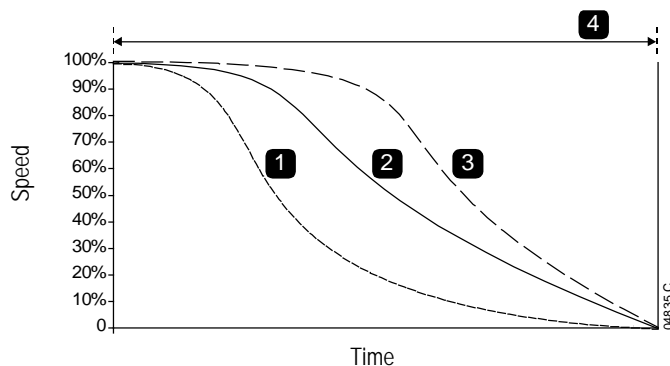

Adaptive Stop Profile (parameter 2K):

1. Early Deceleration
2. Constant Deceleration
3. Late Deceleration
4. Stop Time (parameter 2J)

Adaptive Control is ideal for pumping applications, where it can minimise the damaging effects of fluid hammer. We recommend testing the three profiles to identify the best profile for the application.

Adaptive Stop Profile	Application
Late Deceleration	High head systems where even a small decrease in motor/pump speed results in a rapid transition between forward flow and reverse flow.
Constant Deceleration	Low to medium head, high flow applications where the fluid has high momentum.
Early Deceleration	Open pump systems where fluid must drain back through the pump without driving the pump in reverse.

8.9.4 DC Brake

Brake reduces the time required to stop the motor.

During braking an increased noise level from the motor may be audible. This is a normal part of motor braking.



CAUTION

When using DC brake, the mains supply must be connected to the soft starter (input terminals L1, L2, L3) in positive phase sequence.



CAUTION


If the brake torque is set too high, the motor will stop before the end of the brake time and the motor will suffer unnecessary heating which could result in damage. Careful configuration is required to ensure safe operation of the starter and motor.

A high brake torque setting can result in peak currents up to motor DOL being drawn while the motor is stopping. Ensure protection fuses installed in the motor branch circuit are selected appropriately.



CAUTION

Brake operation causes the motor to heat faster than the rate calculated by the motor thermal model. If you are using brake, install a motor thermistor or allow sufficient restart delay (parameter 5P).

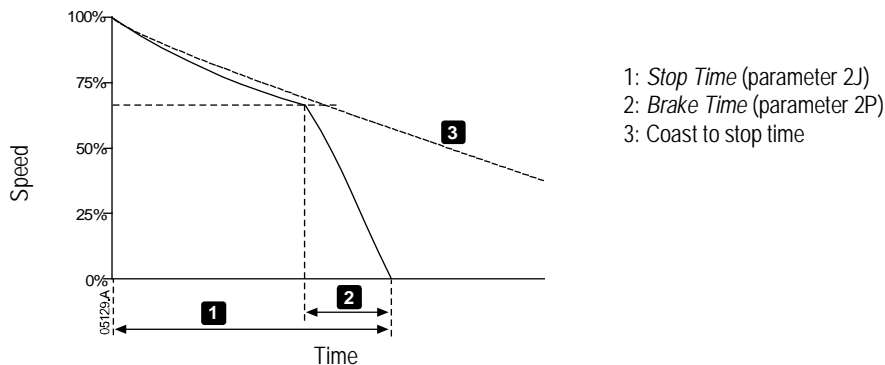

Parameter settings:

- Parameter 2I *Stop Mode*: set to 'DC Brake'.
- Parameter 2J *Stop Time*: This is the total braking time (1) and must be set sufficiently longer than the brake time (parameter 2P) to allow the pre-braking stage to reduce motor speed to approximately 70%. If the stop time is too short, braking will not be successful and the motor will coast to stop.
- Parameter 2O *DC Brake Torque*: set as required to slow the load. If set too low, the motor will not stop completely and will coast to stop after the end of the braking period.
- Parameter 2P *DC Brake Time*: Set Brake Time (parameter 2P) to approximately one quarter of the programmed Stop Time. This sets the time for the Full Brake stage (2).

8.9.5 DC Brake with External Zero Speed Sensor

For loads which may vary between braking cycles, install an external zero-speed sensor to ensure the soft starter ends DC braking when the motor has reached a standstill. This avoids unnecessary motor heating.

Configure DC brake for the longest braking time required, and also set parameter 7A *Input A Function* to 'Zero Speed Sensor'. When the motor reaches a standstill, the zero speed sensor opens the circuit across 13, 14 and the soft starter terminates the stop.

8.9.6 Soft Brake

For applications with high inertia and/or a variable load requiring the maximum possible braking torque, the ASA 4.0 Advanced can be configured for soft braking.


The ASA 4.0 Advanced uses a changeover relay to control forward run and braking contactors. While braking, the ASA 4.0 Advanced reverses the phase sequence to the motor and supplies reduced current, gently slowing the load.

When motor speed approaches zero, the zero speed sensor (A2) stops the soft starter and opens the braking contactor (K2).

Soft braking can be used with both the primary and secondary motor sets, and must be configured separately for each.

Parameter settings:

- Parameter 2I *Stop Mode*: set to 'Soft Brake'
- Parameter 2Q *Brake Current Limit*: set as required to slow the load
- Parameter 2R *Soft Brake Delay*: controls the time the soft starter will wait after a stop signal is received, before it begins to supply braking current to the motor. Set to allow time for K1 and K2 to switch.
- Parameter 7A *Input A Function*: set to 'Zero Speed Sensor'
- Parameter 8A *Relay A Function*: set to 'Soft Brake Relay'

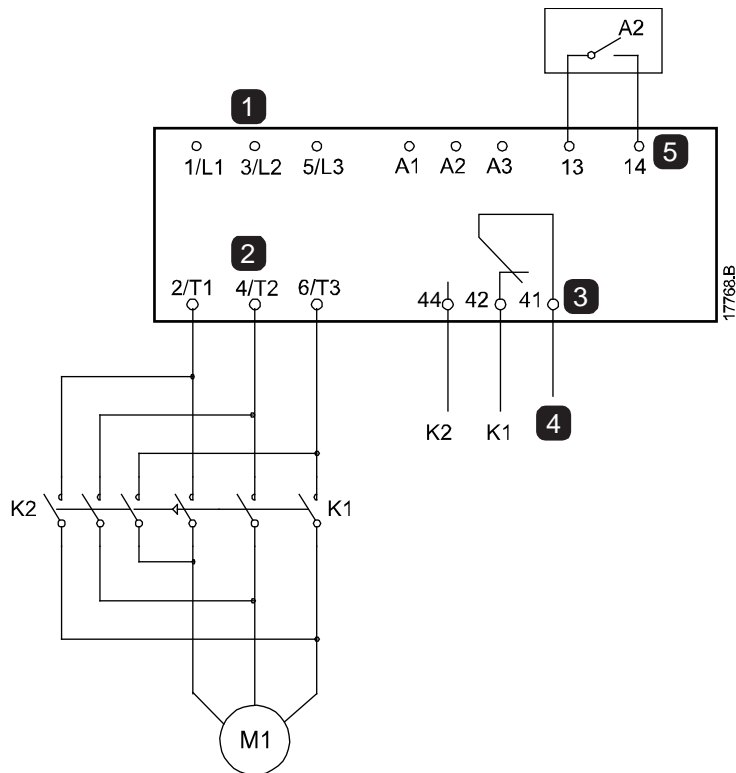

1	Three-phase supply
2	Motor terminals
3	Relay output A
4	K1/K2 coil supply
5	Programmable input A


K1	Line contactor (Run)
K2	Line contactor (Brake)
A2	Zero speed sensor

8.10 Pump Clean

The starter can perform a pump clean function before soft starting the motor. This can help dislodge debris from the impeller.

Pump clean starts the motor in reverse then forward direction, then stops the motor. Pump clean can be configured to repeat the process up to 5 times. After the specified number of cleaning cycles, the starter performs the programmed soft start.

Pump clean operation is controlled by the start/stop input (11, 12). A programmable input must be set to pump clean (refer to parameter 7A *Input A Function* for details) and the input must be closed when the start signal is applied.

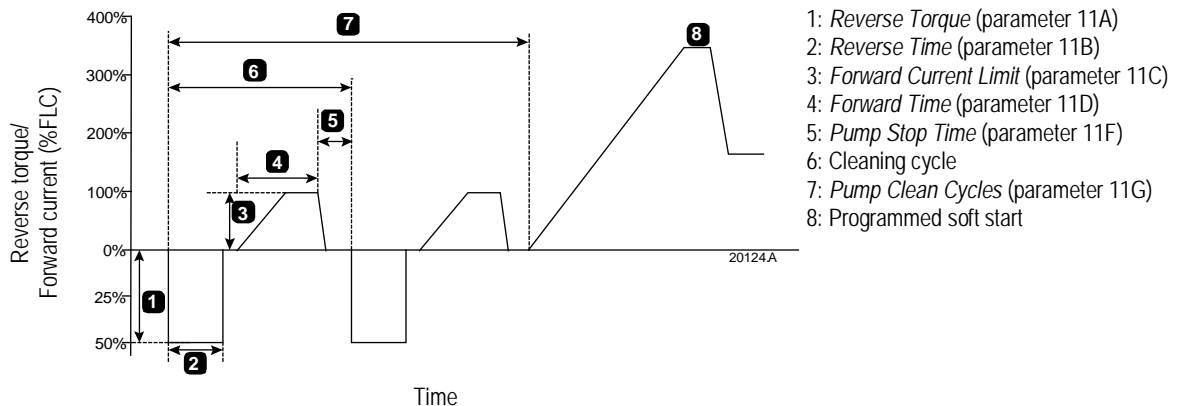

8.11 Reverse Direction Operation

The starter can control a reversing contactor, to operate the motor in reverse direction. When reverse operation is selected, the starter will perform a soft start using the opposite phase sequence from normal operation.

Reverse operation is controlled by the start/stop input (11, 12). A programmable input must be set to reverse direction (parameter 7A *Input A Function*) and an output must be set to reversing contactor (parameter 8A *Relay A Function*).

The input must be closed when the start signal is applied. The starter will keep the reverse relay in the same state until the end of the starting/stopping cycle.

This example shows a simple installation, but many different configurations are possible depending on your application requirements. Contact your local supplier for an application note showing more installation options.




NOTE

The first start after the direction is changed will be constant current.



NOTE

If phase sequence protection is required, install the reversing contactor on the output (motor) side of the soft starter.

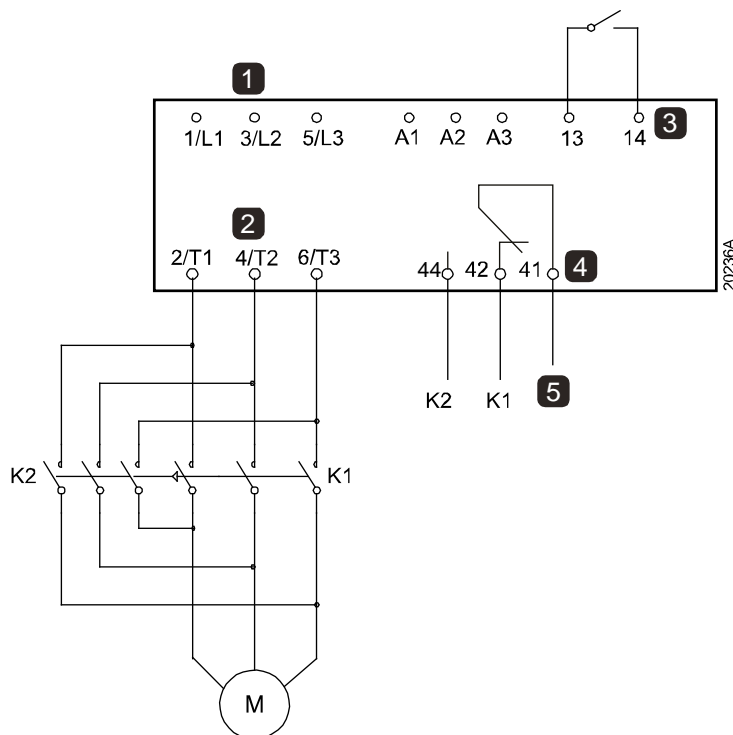

1	Three-phase supply
2	Motor terminals
3	Programmable input A (set = Reverse Direction)
4	Relay output A (set = Reversing Contactor)
5	K1/K2 coil supply

K1	Forward run contactor
K2	Reversing contactor

8.12 Jog Operation

Jog runs the motor at reduced speed, to allow alignment of the load or to assist servicing. The motor can be jogged in either forward or reverse direction.

Jog is only available when the starter is controlled via the digital inputs (parameter 1A *Command Source* = 'Digital Input'). To operate in jog, a programmable input must be set to jog (refer to parameter 7A for details) and the input must be closed when the start signal is applied.



CAUTION

Slow speed running is not intended for continuous operation due to reduced motor cooling.

Jog operation causes the motor to heat faster than the rate calculated by the motor thermal model. If you are using jog, install a motor thermistor or allow sufficient restart delay (parameter 5P).


The maximum available torque for jog forward is approximately 50%~75% of motor full load torque (FLT) depending on the motor. The torque when the motor is jogged in reverse is approximately 25% to 50% of FLT.

Parameters 2H and 3J *Jog Torque* control how much of the maximum available jog torque the soft starter will apply to the motor.



NOTE

Torque settings above 50% may cause increased shaft vibration.

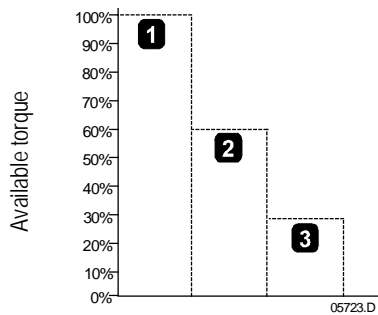

1. Motor FLT
2. Jog forward maximum torque
3. Jog reverse maximum torque

8.13 Inside Delta Operation

When connecting in inside delta, enter the motor full load current (FLC) for parameter 1B. The ASA 4.0 Advanced will automatically detect whether the motor is connected in-line or inside delta and will calculate the correct inside delta current level.

Adaptive Control, Jog, Brake and PowerThrough functions are not supported with inside delta (six-wire) operation. If these functions are programmed when the starter is connected inside delta the behaviour is as given below:

Adaptive Control Start	The starter performs a constant current start.
Adaptive Control Stop	The starter performs a TVR soft stop if parameter 2J <i>Stop Time</i> is >0 secs. If parameter 2J is set to 0 secs the starter performs a coast to stop.
Jog	The starter issues a warning with the error message <i>Unsupported option</i> .
DC Brake	The starter performs a coast to stop.
Soft Brake	The starter performs a coast to stop.
PowerThrough	The starter trips with the error message <i>Lx-Tx Shorted</i> .



NOTE

When connected in inside delta, the ASA 4.0 Advanced will not detect phase loss on T2 during run.



NOTE

If the starter is not correctly detecting the motor connection, use parameter 20F *Motor Connection*.

8.14 Secondary Motor Set

The ASA 4.0 Advanced can be programmed with two separate starting and stopping profiles. This allows the soft starter to control the motor in two different starting and stopping configurations.

The secondary motor set is ideal for dual winding (Dahlander) motors, multi-motor applications, or situations where the motor may start in two different conditions (such as loaded and unloaded conveyors).

The secondary motor set can also be used for duty/standby applications.



NOTE

For duty/standby applications, set parameter 6Q *Motor Overtemperature* to Log Only and install temperature protection for each motor.

To use the secondary motor set, a programmable input must be set to 'Motor Set Select' and the input must be closed before a start command is given (refer to 7A *Input A Function* and 7E *Input B Function*). The ASA 4.0 Advanced checks which motor set to use at a start, and will use that motor set for the entire start/stop cycle.

9 Programmable Parameters

9.1 Main Menu

The main menu lets you view and change programmable parameters that control how the ASA 4.0 Advanced operates.

To open the main menu, press the **MENU/ENTER** button then scroll to Main Menu and press **MENU/ENTER** again.



NOTE

Parameters for smart card functions are only visible in the parameter list if the smart card is installed.

9.2 Altering Parameter Values

To change a parameter value:

- scroll to the appropriate parameter in the main menu and press ► to enter edit mode.
- to alter the parameter setting, use the ▲ and ▼ buttons. Pressing ▲ or ▼ once will increase or decrease the value by one unit. If the button is held for longer than five seconds, the value will increase or decrease at a faster rate.
- to save changes, press **STORE**. The setting shown on the display will be saved and the keypad will return to the parameter list.
- to cancel changes, press **EXIT**. The keypad will ask for confirmation, then return to the parameter list without saving changes.

9.3 Adjustment Lock

You can prevent users from altering parameter settings by turning on the adjustment lock (parameter 10G *Adjustment Lock*).

If a user attempts to change a parameter value when the adjustment lock is active, an error message is displayed:

ACCESS DENIED
ADJ LOCK IS ON

9.4 Parameter List

		Parameter Group	Default Setting
1		Motor Details	
	1A	<i>Command Source</i>	Digital Input
	1B	<i>Motor Full Load Current</i>	Model dependent
	1C	<i>Motor kW</i>	0 kW
	1D	<i>Locked Rotor Time</i>	00:10 (mm:ss)
	1E	<i>Locked Rotor Current</i>	600%
	1F	<i>Motor Service Factor</i>	105%
	1G	<i>Reserved</i>	
2		Motor Start/Stop	
	2A	<i>Start Mode</i>	Constant Current
	2B	<i>Start Ramp Time</i>	00:10 (mm:ss)
	2C	<i>Initial Current</i>	200%
	2D	<i>Current Limit</i>	350%
	2E	<i>Adaptive Start Profile</i>	Constant Acceleration
	2F	<i>Kickstart Time</i>	000 ms
	2G	<i>Kickstart Level</i>	500%
	2H	<i>Jog Torque</i>	50%
	2I	<i>Stop Mode</i>	TVR Soft Stop
	2J	<i>Stop Time</i>	00:00 (mm:ss)
	2K	<i>Adaptive Stop Profile</i>	Constant Deceleration
	2L	<i>Adaptive Control Gain</i>	75%
	2M	<i>Multi Pump</i>	Single Pump
	2N	<i>Start Delay</i>	00:00 (mm:ss)
	2O	<i>DC Brake Torque</i>	20%
	2P	<i>DC Brake Time</i>	00:01 (mm:ss)
	2Q	<i>Brake Current Limit</i>	250%
	2R	<i>Soft Brake Delay</i>	400 ms
3		Motor Start/Stop 2	
	3A	<i>Motor Full Load Current-2</i>	Model dependent
	3B	<i>Motor kW-2</i>	0 kW
	3C	<i>Start Mode-2</i>	Constant Current
	3D	<i>Start Ramp Time-2</i>	00:10 (mm:ss)
	3E	<i>Initial Current-2</i>	200%

	Parameter Group	Default Setting
3F	<i>Current Limit-2</i>	350%
3G	<i>Adaptive Start Profile-2</i>	Constant Acceleration
3H	<i>Kickstart Time-2</i>	000 ms
3I	<i>Kickstart Level-2</i>	500%
3J	<i>Jog Torque-2</i>	50%
3K	<i>Stop Mode-2</i>	TVR Soft Stop
3L	<i>Stop Time-2</i>	00:00 (mm:ss)
3M	<i>Adaptive Stop Profile-2</i>	Constant Deceleration
3N	<i>Adaptive Control Gain-2</i>	75%
3O	<i>Multi Pump-2</i>	Single Pump
3P	<i>Start Delay-2</i>	00:00 (mm:ss)
3Q	<i>DC Brake Torque-2</i>	20%
3R	<i>DC Brake Time-2</i>	00:01 (mm:ss)
3S	<i>Brake Current Limit-2</i>	250%
3T	<i>Soft Brake Delay-2</i>	400 ms
4	Auto-Start/Stop	
4A	<i>Auto-Start/Stop Mode</i>	Disable
4B	<i>Run Time</i>	00:00 (hh:mm)
4C	<i>Stopped Time</i>	00:00 (hh:mm)
4D	<i>Sunday Mode</i>	Start/Stop Disable
4E	<i>Sunday Start Time</i>	00:00 (hh:mm)
4F	<i>Sunday Stop Time</i>	00:00 (hh:mm)
4G	<i>Monday Mode</i>	Start/Stop Disable
4H	<i>Monday Start Time</i>	00:00 (hh:mm)
4I	<i>Monday Stop Time</i>	00:00 (hh:mm)
4J	<i>Tuesday Mode</i>	Start/Stop Disable
4K	<i>Tuesday Start Time</i>	00:00 (hh:mm)
4L	<i>Tuesday Stop Time</i>	00:00 (hh:mm)
4M	<i>Wednesday Mode</i>	Start/Stop Disable
4N	<i>Wednesday Start Time</i>	00:00 (hh:mm)
4O	<i>Wednesday Stop Time</i>	00:00 (hh:mm)
4P	<i>Thursday Mode</i>	Start/Stop Disable
4Q	<i>Thursday Start Time</i>	00:00 (hh:mm)
4R	<i>Thursday Stop Time</i>	00:00 (hh:mm)
4S	<i>Friday Mode</i>	Start/Stop Disable
4T	<i>Friday Start Time</i>	00:00 (hh:mm)
4U	<i>Friday Stop Time</i>	00:00 (hh:mm)
4V	<i>Saturday Mode</i>	Start/Stop Disable
4W	<i>Saturday Start Time</i>	00:00 (hh:mm)
4X	<i>Saturday Stop Time</i>	00:00 (hh:mm)
5	Protection Levels	
5A	<i>Current Imbalance</i>	30%
5B	<i>Current Imbalance Delay</i>	00:03 (mm:ss)
5C	<i>Undercurrent</i>	20%
5D	<i>Undercurrent Delay</i>	00:05 (mm:ss)
5E	<i>Overcurrent</i>	400%
5F	<i>Overcurrent Delay</i>	00:00 (mm:ss)
5G	<i>Undervoltage</i>	350 V
5H	<i>Undervoltage Delay</i>	00:01 (mm:ss)
5I	<i>Overvoltage</i>	500 V
5J	<i>Overvoltage Delay</i>	00:01 (mm:ss)
5K	<i>Underpower</i>	10%
5L	<i>Underpower Delay</i>	00:01 (mm:ss)
5M	<i>Overpower</i>	150%
5N	<i>Overpower Delay</i>	00:01 (mm:ss)
5O	<i>Excess Start Time</i>	00:20 (mm:ss)
5P	<i>Restart Delay</i>	00:10 (mm:ss)
5Q	<i>Starts per Hour</i>	0
5R	<i>Phase Sequence</i>	Any Sequence

	Parameter Group	Default Setting
6	Protection Actions	
6A	Auto-Reset Count	0
6B	Auto-Reset Delay	00:05 (mm:ss)
6C	Current Imbalance	Soft Trip and Log
6D	Undercurrent	Soft Trip and Log
6E	Overcurrent	Soft Trip and Log
6F	Undervoltage	Soft Trip and Log
6G	Overvoltage	Soft Trip and Log
6H	Underpower	Log Only
6I	Overpower	Log Only
6J	Excess Start Time	Soft Trip and Log
6K	Input A Trip	Soft Trip and Log
6L	Input B Trip	Soft Trip and Log
6M	Network Communications	Soft Trip and Log
6N	Remote Keypad Fault	Soft Trip and Log
6O	Frequency	Soft Trip and Log
6P	Phase Sequence	Soft Trip and Log
6Q	Motor Overtemperature	Soft Trip and Log
6R	Motor Thermistor Circuit	Soft Trip and Log
6S	Shorted SCR Action	3-Phase Control Only
6T	Battery/Clock	Soft Trip and Log
7	Inputs	
7A	Input A Function	Input Trip (N/O)
7B	Input A Trip	Operating Only
7C	Input A Trip Delay	00:00 (mm:ss)
7D	Input A Initial Delay	00:00 (mm:ss)
7E	Input B Function	Input Trip (N/O)
7F	Input B Trip	Operating Only
7G	Input B Trip Delay	00:00 (mm:ss)
7H	Input B Initial Delay	00:00 (mm:ss)
7I	Reset/Enable Logic	Normally Closed (N/C)
7J	Input A Name	Input A Trip
7K	Input B Name	Input B Trip
8	Relay Outputs	
8A	Relay A Function	Run
8B	Relay A On Delay	00:00 (mm:ss)
8C	Relay A Off Delay	00:00 (mm:ss)
8D	Relay B Function	Run
8E	Relay B On Delay	00:00 (mm:ss)
8F	Relay B Off Delay	00:00 (mm:ss)
8G	Low Current Flag	50%
8H	High Current Flag	100%
8I	Motor Temperature Flag	80%
8J	Main Contactor Time	400 ms
9	Analog Output	
9A	Analog Output A	Current (% FLC)
9B	Analog A Scale	4-20 mA
9C	Analog A Maximum Adjustment	100%
9D	Analog A Minimum Adjustment	000%
10	Display	
10A	Language	English
10B	Temperature Scale	Celsius
10C	Graph Timebase	30 seconds
10D	Graph Maximum Adjustment	400%
10E	Graph Minimum Adjustment	0%
10F	Current Calibration	100%
10G	Adjustment Lock	Read & Write
10H	User Parameter 1	Current
10I	User Parameter 2	Motor Voltage
10J	User Parameter 3	Mains Frequency
10K	User Parameter 4	Motor pf

Parameter Group		Default Setting
10L	User Parameter 5	Motor Power
10M	User Parameter 6	Motor Temperature (%)
11	Pump Clean	
11A	Reverse Torque	20%
11B	Reverse Time	00:10 (mm:ss)
11C	Forward Current Limit	100%
11D	Forward Time	00:10 (mm:ss)
11E	Pump Stop Mode	Coast To Stop
11F	Pump Stop Time	00:10 (mm:ss)
11G	Pump Clean Cycles	1
12	Communications Card	
12A	Modbus Address	1
12B	Modbus Baud Rate	9600
12C	Modbus Parity	None
12D	Modbus Timeout	Off
12E	Devicenet Address	0
12F	Devicenet Baud Rate	125kB
12G	Profibus Address	1
12H	Gateway Address	192
12I	Gateway Address 2	168
12J	Gateway Address 3	0
12K	Gateway Address 4	100
12L	IP Address	192
12M	IP Address 2	168
12N	IP Address 3	0
12O	IP Address 4	2
12P	Subnet Mask	255
12Q	Subnet Mask 2	255
12R	Subnet Mask 3	255
12S	Subnet Mask 4	0
12T	DHCP	Disable
12U	Location ID	0
20	Advanced	
20A	Tracking Gain	50%
20B	Pedestal Detect	80%
20C	Bypass Contactor Delay	150 ms
20D	Model Rating	Model dependent
20E	Screen Timeout	1 minute
20F	Motor Connection	Auto-detect
30	Pump Input Configuration	
30A	Pressure Sensor Type	None
30B	Pressure Units	kPa
30C	Pressure at 4 mA	0
30D	Pressure at 20 mA	0
30E	Flow Sensor Type	None
30F	Flow Units	litres/second
30G	Flow at 4 mA	0
30H	Flow at 20 mA	0
30I	Units per Minute at Max Flow	0
30J	Pulses per Minute at Max Flow	0
30K	Units per Pulse	0
30L	Depth Sensor Type	None
30M	Depth Units	metres
30N	Depth at 4 mA	0
30O	Depth at 20 mA	0
31	Flow Protection	
31A	High Flow Trip Level	10
31B	Low Flow Trip Level	5
31C	Flow Start Delay	00:00:50 (mm:ss:ms)
31D	Flow Response Delay	00:00:50 (mm:ss:ms)

	Parameter Group	Default Setting
32	Pressure Protection	
32A	High Pressure Trip Level	10
32B	High Pressure Start Delay	00:00:50 (mm:ss.ms)
32C	High Pressure Response Delay	00:00:50 (mm:ss.ms)
32D	Low Pressure Trip Level	5
32E	Low Pressure Start Delay	00:00:50 (mm:ss.ms)
32F	Low Pressure Response Delay	00:00:50 (mm:ss.ms)
33	Pressure Control	
33A	Pressure Control Mode	Off
33B	Start Pressure Level	5
33C	Start Response Delay	00:00:50 (mm:ss.ms)
33D	Stop Pressure Level	10
33E	Stop Response Delay	00:00:50 (mm:ss.ms)
34	Depth Protection	
34A	Depth Trip Level	5
34B	Depth Reset Level	10
34C	Depth Start Delay	00:00:50 (mm:ss.ms)
34D	Depth Response Delay	00:00:50 (mm:ss.ms)
35	Thermal Protection	
35A	Temperature Sensor Type	None
35B	Temperature Trip Level	40
36	Pump Trip Action	
36A	Pressure Sensor	Soft Trip and Log
36B	Flow Sensor	Soft Trip and Log
36C	Depth Sensor	Soft Trip and Log
36D	High Pressure	Soft Trip and Log
36E	Low Pressure	Soft Trip and Log
36F	High Flow	Soft Trip and Log
36G	Low Flow	Soft Trip and Log
36H	Flow Switch	Soft Trip and Log
36I	Well Depth	Soft Trip and Log
36J	RTD/PT100 B	Soft Trip and Log

9.5

1 Motor Details

1A – Command Source

Options:	Digital Input (default)	The ASA 4.0 Advanced will accept start and stop commands from the digital inputs.
	Network	The ASA 4.0 Advanced will accept start and stop commands from the communication expansion card.
	Remote Keypad	The ASA 4.0 Advanced will accept start and stop commands from the Remote Keypad.
	Clock	The ASA 4.0 Advanced will start and stop as scheduled in parameters 4D to 4X.
	Smart Card	The ASA 4.0 Advanced will accept start and stop commands from the smart card.
	Smart Card + Clock	The ASA 4.0 Advanced will accept start commands from the smart card if they are within the operating schedule set in parameters 4D to 4X. A stop command from the smart card will be accepted regardless of the schedule.
	Timer	After a start signal is received, the ASA 4.0 Advanced will start and stop the motor according to the timers set in parameters 4B and 4C.

Description: Selects the command source for controlling the soft starter.

1B – Motor Full Load Current

Range: Model dependent

Description: Matches the starter to the connected motor's full load current. Set to the full load current (FLC) rating shown on the motor nameplate.

1C – Motor kW

Range: 0 - 9999 kW

Default: 0

Description: Sets the running power of the connected motor, in kilowatts. This setting is the basis for power reporting and protection.



NOTE

The motor nameplate may state different power ratings for different supply voltages or power connections. Ensure that the motor kW setting is accurate for the installation.

1D – Locked Rotor Time

Range: 0:01 - 2:00 (minutes:seconds)

Default: 10 seconds

Description: Sets the maximum length of time the motor can sustain locked rotor current from cold before reaching its maximum temperature. Set according to the motor datasheet.

1E – Locked Rotor Current

Range: 400% - 1200% FLC

Default: 600%

Description: Sets the locked rotor current of the connected motor, as a percentage of full load current. Set according to the motor datasheet.

1F – Motor Service Factor

Range: 100% - 130%

Default: 105%

Description: Sets the motor service factor used by the thermal model. If the motor runs at full load current, it will reach 100%. Set according to the motor datasheet.



NOTE

Parameters 1D, 1E and 1F determine the trip current for motor overload protection. The default settings of parameters 1D, 1E and 1F provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.

9.6 2 Motor Start/Stop

2A – Start Mode

Options: Constant Current (default)
Adaptive Control

Description: Selects the soft start mode.



NOTE

The ASA 4.0 Advanced will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

2B – Start Ramp Time

Range: 0:01 - 3:00 (minutes:seconds)

Default: 10 seconds

Description: Sets the total start time for an Adaptive Control start or the ramp time for current ramp starting (from the initial current to the current limit).

2C – Initial Current

Range: 100% - 600% FLC

Default: 200%

Description: Sets the initial start current level for current ramp starting, as a percentage of motor full load current. Set so that the motor begins to accelerate immediately after a start is initiated. If current ramp starting is not required, set the initial current equal to the current limit.

2D – Current Limit

Range: 100% - 600% FLC

Default: 350%

Description: Sets the current limit for constant current and current ramp soft starting, as a percentage of motor full load current.

2E – Adaptive Start Profile

Options: Early Acceleration
Constant Acceleration (default)
Late Acceleration

Description: Selects which profile the ASA 4.0 Advanced will use for an Adaptive Control soft start.



NOTE

The ASA 4.0 Advanced will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

2F – Kickstart Time

Range: 0 – 2000 milliseconds **Default:** 0000 milliseconds

Description: Sets the kickstart duration. A setting of 0 disables kickstart.

2G – Kickstart Level

Range: 100% - 700% FLC **Default:** 500%

Description: Sets the level of the kickstart current.



CAUTION

Kickstart subjects the mechanical equipment to increased torque levels. Ensure the motor, load and couplings can handle the additional torque before using this feature.

2H – Jog Torque

The ASA 4.0 Advanced can jog the motor at a reduced speed, which allows precise positioning of belts and flywheels. Jog can be used for either forward or reverse operation.

Range: 20% - 100% **Default:** 50%

Description: Sets the current limit for jog operation.

2I – Stop Mode

Options: Coast To Stop
TVR Soft Stop (default)
Adaptive Control
DC Brake
Soft Brake

Description: Selects the stop mode.

2J – Stop Time

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 0 second

Description: Sets the time for soft stopping the motor using timed voltage ramp or Adaptive Control. If a main contactor is installed, the contactor must remain closed until the end of the stop time. Use the main contactor output (33, 34) to control the main contactor.

2K – Adaptive Stop Profile

Options: Early Deceleration
Constant Deceleration (default)
Late Deceleration

Description: Selects which profile the ASA 4.0 Advanced will use for an Adaptive Control soft stop.

2L – Adaptive Control Gain

Range: 1% - 200% **Default:** 75%

Description: Adjusts the performance of Adaptive Control. This setting affects both starting and stopping control.

2M – Multi Pump

Options: Single Pump (default)
Manifold Pump

Description: Adjusts the performance of adaptive control to suit installations with multiple pumps connected to a common outlet manifold.

2N – Start Delay

Range: 0:00 - 60:00 (minutes:seconds) Default: 0 second
 Description: Sets a delay after the starter receives a start command, before it starts the motor.

2O – DC Brake Torque

Range: 20% - 100% Default: 20%
 Description: Sets the amount of brake torque the ASA 4.0 Advanced will use to slow the motor.

2P – DC Brake Time

Range: 0:01 - 0:30 (minutes:seconds) Default: 1 second
 Description: Sets the duration for DC injection during a braking stop.

2Q – Brake Current Limit

Range: 100% - 600% FLC Default: 250%
 Description: Sets the current limit for soft brake.

2R – Soft Brake Delay

Range: 400 - 2000 milliseconds Default: 400 milliseconds
 Description: Sets the time the soft starter will wait after a stop signal is received, before it begins to supply braking current to the motor. Set to allow time for K1 and K2 to switch.

9.7 3 Motor Start/Stop-2

The parameters in this group control the operation of the secondary configuration of the motor. Use the programmable input to select the active motor set.

Refer to *Secondary Motor Set* on page 40 for details.

3A – Motor Full Load Current-2

Range: Model dependent
 Description: Sets the secondary motor's full load current.

3B – Motor kW-2

Range: 0 - 9999 kW Default: 0
 Description: Sets the running power of the secondary motor, in kilowatts.

3C – Start Mode-2

Options: Constant Current (default)
 Adaptive Control
 Description: Selects the soft start mode.

3D – Start Ramp Time-2

Range: 0:01 - 3:00 (minutes:seconds) Default: 10 seconds
 Description: Sets the total start time for an Adaptive Control start or the ramp time for current ramp starting (from the initial current to the current limit).

3E – Initial Current-2

Range: 100% - 600% FLC Default: 200%
 Description: Sets the initial start current level for current ramp starting, as a percentage of motor full load current. Set so that the motor begins to accelerate immediately after a start is initiated.
 If current ramp starting is not required, set the initial current equal to the current limit.

3F – Current Limit-2

Range: 100% - 600% FLC

Default: 350%

Description: Sets the current limit for constant current and current ramp soft starting, as a percentage of motor full load current.



NOTE

The ASA 4.0 Advanced will apply the current limit on all soft starts, including adaptive control. If the current limit is too low or the start ramp time (parameter 2B) is too short, the motor may not start successfully.

3G – Adaptive Start Profile-2

Options: Early Acceleration
Constant Acceleration (default)
Late Acceleration

Description: Selects which profile the ASA 4.0 Advanced will use for an Adaptive Control soft start.

3H – Kickstart Time-2

Range: 0 – 2000 milliseconds

Default: 0000 milliseconds

Description: Sets the kickstart duration. A setting of 0 disables kickstart.

3I – Kickstart Level-2

Range: 100% - 700% FLC

Default: 500%

Description: Sets the level of the kickstart current.

3J – Jog Torque-2

Range: 20% - 100%

Default: 50%

Description: Sets the current limit for jog operation.

3K – Stop Mode-2

Options: Coast To Stop
TVR Soft Stop (default)
Adaptive Control
DC Brake
Soft Brake

Description: Selects the stop mode.

3L – Stop Time-2

Range: 0:00 - 4:00 (minutes:seconds)

Default: 0 second

Description: Sets the time for soft stopping the motor using timed voltage ramp or Adaptive Control. If a main contactor is installed, the contactor must remain closed until the end of the stop time. Use the main contactor output (33, 34) to control the main contactor.

3M – Adaptive Stop Profile-2

Options: Early Deceleration
Constant Deceleration (default)
Late Deceleration

Description: Selects which profile the ASA 4.0 Advanced will use for an Adaptive Control soft stop.

3N – Adaptive Control Gain-2

Range: 1% - 200%

Default: 75%

Description: Adjusts the performance of Adaptive Control. This setting affects both starting and stopping control.

3O – Multi Pump-2

Options: Single Pump (default)
Manifold Pump

Description: Adjusts the performance of adaptive control to suit installations with multiple pumps connected to a common outlet manifold.

3P – Start Delay-2

Range: 0:00 - 60:00 (minutes:seconds) Default: 0 second
 Description: Sets a delay after the starter receives a start command, before it starts the motor.

3Q – DC Brake Torque-2

Range: 20% - 100% Default: 20%
 Description: Sets the amount of brake torque the ASA 4.0 Advanced will use to slow the motor.

3R – DC Brake Time-2

Range: 0:01 - 0:30 (minutes:seconds) Default: 1 second
 Description: Sets the duration for DC injection during a braking stop.

3S – Brake Current Limit-2

Range: 100% - 600% FLC Default: 250%
 Description: Sets the current limit for soft brake.

3T – Soft Brake Delay-2

Range: 400 - 2000 milliseconds Default: 400 milliseconds
 Description: Sets the time the soft starter will wait after a stop signal is received, before it begins to supply braking current to the motor. Set to allow time for K1 and K2 to switch.

9.8 4 Auto-Start/Stop

For clock mode to operate:

- parameter 4A *Auto-Start/Stop Mode* must be set to 'Enable'
- parameter 1A *Command Source* must be set to 'Clock'
- the reset input must be closed
- the start input (11, 12) must be active. This allows the ASA 4.0 Advanced to be stopped via the digital inputs in an emergency.

Clock mode operation is controlled by parameters 4D ~ 4X.

4A – Auto-Start/Stop Mode

Options: Disable (default)
 Enable Clock Mode
 Enable Timer Mode
 Description: Enable or disable auto-start/stop operation.

4B – Run Time

Range: 00:00 - 23:59 hh:mm Default: 00:00
 Description: Sets the duration for the starter to run, after a timer mode auto-start.

4C – Stopped Time

Range: 00:00 - 23:59 hh:mm Default: 00:00
 Description: Sets the duration for the starter to remain stopped, when operating in timer mode.

4D – Sunday Mode

Options: Start/Stop Disable (default) Disables auto-start/stop control. Any times scheduled in parameters 4E or 4F will be ignored.
 Start Only Enable Enables auto-start control. Any auto-stop times scheduled in parameter 4F will be ignored.
 Stop Only Enable Enables auto-stop control. Any auto-start times scheduled in parameter 4E will be ignored.
 Start/Stop Enable Enables auto-start and auto-stop control.
 Description: Enables or disables auto-start/stop for Sunday.

4E – Sunday Start Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-start time for Sunday (24 hour format).

4F – Sunday Stop Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-stop time for Sunday (24 hour format).

4G – Monday Mode

Options: Start/Stop Disable (default) Stop Only Enable
 Start Only Enable Start/Stop Enable
 Description: Enables or disables auto-start/stop for Monday.

4H – Monday Start Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-start time for Monday (24 hour format).

4I – Monday Stop Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-stop time for Monday (24 hour format).

4J – Tuesday Mode

Options: Start/Stop Disable (default) Stop Only Enable
 Start Only Enable Start/Stop Enable
 Description: Enables or disables auto-start/stop for Tuesday.

4K – Tuesday Start Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-start time for Tuesday (24 hour format).

4L – Tuesday Stop Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-stop time for Tuesday (24 hour format).

4M – Wednesday Mode

Options: Start/Stop Disable (default) Stop Only Enable
 Start Only Enable Start/Stop Enable
 Description: Enables or disables auto-start/stop for Wednesday.

4N – Wednesday Start Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-start time for Wednesday (24 hour format).

4O – Wednesday Stop Time

Range: 00:00 - 23:59 Default: 00:00
 Description: Sets the auto-stop time for Wednesday (24 hour format).

4P – Thursday Mode

Options: Start/Stop Disable (default) Stop Only Enable
 Start Only Enable Start/Stop Enable
 Description: Enables or disables auto-start/stop for Thursday.

4Q – Thursday Start Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-start time for Thursday (24 hour format).

4R – Thursday Stop Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-stop time for Thursday (24 hour format).

4S – Friday Mode

Options: Start/Stop Disable (default) Stop Only Enable
Start Only Enable Start/Stop Enable
Description: Enables or disables auto-start/stop for Friday.

4T – Friday Start Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-start time for Friday (24 hour format).

4U – Friday Stop Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-stop time for Friday (24 hour format).

4V – Saturday Mode

Options: Start/Stop Disable (default) Stop Only Enable
Start Only Enable Start/Stop Enable
Description: Enables or disables auto-start/stop for Saturday.

4W – Saturday Start Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-start time for Saturday (24 hour format).

4X – Saturday Stop Time

Range: 00:00 - 23:59 Default: 00:00
Description: Sets the auto-stop time for Saturday (24 hour format).

9.9 5 Protection Levels

5A – Current Imbalance

Range: 10% - 50% Default: 30%
Description: Sets the trip point for current imbalance protection.

5B – Current Imbalance Delay

Range: 0:00 - 4:00 (minutes:seconds) Default: 3 seconds
Description: Slows the ASA 4.0 Advanced's response to current imbalance, avoiding trips due to momentary fluctuations.

5C – Undercurrent

Range: 0% - 100% Default: 20%
Description: Sets the trip point for undercurrent protection, as a percentage of motor full load current. Set to a level between the motor's normal working range and the motor's magnetising (no load) current (typically 25% to 35% of full load current). A setting of 0% disables undercurrent protection.

5D – Undercurrent Delay

Range: 0:00 - 4:00 (minutes:seconds) Default: 5 seconds
Description: Slows the ASA 4.0 Advanced's response to undercurrent, avoiding trips due to momentary fluctuations.

5E – Overcurrent

Range: 80% - 600% **Default:** 400%
 Description: Sets the trip point for overcurrent protection, as a percentage of motor full load current.

5F – Overcurrent Delay

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 0 second
 Description: Slows the ASA 4.0 Advanced's response to overcurrent, avoiding trips due to momentary overcurrent events.

5G – Undervoltage

Range: 100 - 1000 V **Default:** 350
 Description: Sets the trip point for undervoltage protection. Set as required.



NOTE

Voltage protections will not operate correctly until the starter is in Run mode.

5H – Undervoltage Delay

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 1 second
 Description: Slows the ASA 4.0 Advanced's response to undervoltage, avoiding trips due to momentary fluctuations.

5I – Overvoltage

Range: 100 - 1000 V **Default:** 500
 Description: Sets the trip point for overvoltage protection. Set as required.

5J – Overvoltage Delay

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 1 second
 Description: Slows the ASA 4.0 Advanced's response to overvoltage, avoiding trips due to momentary fluctuations.

5K – Underpower

Range: 10% -120% **Default:** 10%
 Description: Sets the trip point for underpower protection. Set as required.

5L – Underpower Delay

Range: 0:01 - 1:00 (minutes:seconds) **Default:** 1 second
 Description: Slows the ASA 4.0 Advanced's response to underpower, avoiding trips due to momentary fluctuations.

5M – Overpower

Range: 80% -200% **Default:** 150%
 Description: Sets the trip point for overpower protection. Set as required.

5N – Overpower Delay

Range: 0:01 - 1:00 (minutes:seconds) **Default:** 1 second
 Description: Slows the ASA 4.0 Advanced's response to overpower, avoiding trips due to momentary fluctuations.

5O – Excess Start Time

Range: 0:00 - 4:00 (minutes:seconds) **Default:** 20 seconds
 Description: Excess start time is the maximum time the ASA 4.0 Advanced will attempt to start the motor. If the motor does not transition to Run mode within the programmed limit, the starter will trip. Set for a period slightly longer than required for a normal healthy start. A setting of 0 disables excess start time protection.

5P – Restart Delay

Range: 00:01 - 60:00 (minutes:seconds) **Default:** 10 seconds
 Description: The ASA 4.0 Advanced can be configured to force a delay between the end of a stop and the beginning of the next start. During the restart delay period, the display shows the time remaining before another start can be attempted.

5Q – Starts per Hour

Range:	0 - 10	Default: 0
Description:	Sets the maximum number of starts the ASA 4.0 Advanced will attempt in a 60 minute period. A setting of 0 disables this protection.	

5R – Phase Sequence

Options:	Any Sequence (default) Positive Only Negative Only
Description:	Selects which phase sequences the soft starter will allow at a start. During its pre-start checks, the starter examines the sequence of the phases at its input terminals and trips if the actual sequence does not match the selected option.



CAUTION

When using DC brake, the mains supply must be connected to the soft starter (input terminals L1, L2, L3) in positive phase sequence and parameter 5R *Phase Sequence* must be set to Positive Only.

9.10

6 Protection Action

6A – Auto-Reset Count

Range:	0 – 5	Default: 0
Description:	Sets how many times the soft starter will auto-reset, if it continues to trip. The reset counter increases by one each time the soft starter auto-resets, and resets after a successful start. Setting 6A to zero disables auto-reset.	

6B – Auto-Reset Delay

Range:	0:05 - 15:00 (minutes:seconds)	Default: 5 seconds
Description:	Sets a delay before the soft starter will auto-reset a trip.	

6C – Current Imbalance

Options:	Soft Trip and Log (default)	The soft starter will stop the motor as selected in parameter 2I or 3K <i>Stop Mode</i> , then enter trip state. The trip must be reset before the ASA 4.0 Advanced can restart.
	Soft Trip and Reset	The soft starter will stop the motor as selected in parameter 2I or 3K <i>Stop Mode</i> , then enter trip state. The trip will reset after the auto-reset delay.
	Trip Starter	The soft starter will remove power and the motor will coast to stop. The trip must be reset before the ASA 4.0 Advanced can restart.
	Trip and Reset	The soft starter will remove power and the motor will coast to stop. The trip will reset after the auto-reset delay.
	Warn and Log	The protection will be written to the event log and the display will show a warning message, but the soft starter will continue to operate.
	Log Only	The protection will be written to the event log but the soft starter will continue to operate.
Description:	Selects the soft starter's response to each protection. All protection events are written to the event log.	

6D – Undercurrent

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6E – Overcurrent

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6F – Undervoltage

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6G – Overvoltage

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6H – Underpower

Options:	Log Only (default)	Trip Starter
	Soft Trip and Log	Trip and Reset
	Soft Trip and Reset	Warn and Log

Description: Selects the soft starter's response to the protection event.

6I – Overpower

Options:	Log Only (default)	Trip Starter
	Soft Trip and Log	Trip and Reset
	Soft Trip and Reset	Warn and Log

Description: Selects the soft starter's response to the protection event.

6J – Excess Start Time

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6K – Input A Trip

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6L – Input B Trip

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6M – Network Communications

Options:	Soft Trip and Log (default)	Warn and Log
	Soft Trip and Reset	Log Only
	Trip Starter	Stop
	Trip and Reset	

Description: Selects the soft starter's response to the protection event. If set to Stop, the ASA 4.0 Advanced will perform a soft stop, then can be restarted without a reset.

6N – Remote Keypad Fault

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response to the protection event.

6O – Frequency

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6P – Phase Sequence

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6Q – Motor Overtemperature

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6R – Motor Thermistor Circuit

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

6S – Shorted SCR Action

Options:	3-Phase Control Only (default) PowerThrough
Description:	Selects whether the soft starter will allow PowerThrough operation, if the soft starter is damaged on one phase. The soft starter will use two-phase control, allowing the motor to continue operating in critical applications. Refer to <i>PowerThrough</i> on page 32 for further information.

6T – Battery/Clock

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only
Description:	Selects the soft starter's response to the protection event.	

9.11

7 Inputs

7A – Input A Function

Options:	Command Override: Network	Overrides the setting of 1A and sets the command source to the communications network.
	Command Override: Digital	Overrides the setting of 1A and sets the command source to the digital inputs.
	Command Override: Keypad	Overrides the setting of 1A and sets the command source to the remote keypad.
	Input Trip (N/O) (default)	A closed circuit across 13, 14 trips the soft starter.
	Input Trip (N/C)	An open circuit across 13, 14 trips the soft starter.
	Emergency Mode	A closed circuit across 13, 14 activates emergency mode. When the ASA 4.0 Advanced receives a start command, it will continue to run until a stop command is received, ignoring all trips and warnings.
	Jog Forward	Activates jog operation in a forward direction.
	Jog Reverse	Activates jog operation in reverse direction.
	Zero Speed Sensor	An open circuit across 13, 14 indicates to the soft starter that the motor has reached a standstill. The soft starter requires a normally open zero speed sensor.
	Motor Set Select	A closed circuit across 13, 14 instructs the starter to use the secondary motor configuration for the next start/stop cycle.
	Reverse Direction	A closed circuit across 13, 14 instructs the starter to reverse the phase sequence for the next start.
	Pump Clean	Activates the pump clean function.
Description:	Selects the function of Input A.	

7B – Input A Trip

Options:	Always Active	A trip can occur at any time when the soft starter is receiving power.
	Operating Only (default)	A trip can occur while the soft starter is running, stopping or starting.
	Run Only	A trip can only occur while the soft starter is running.
Description:	Selects when an input trip can occur.	

7C – Input A Trip Delay

Range:	0:00 - 4:00 (minutes:seconds)	Default: 0 second
Description:	Sets a delay between the input activating and the soft starter tripping.	

7D – Input A Initial Delay

Range:	00:00 - 30:00 (minutes:seconds)	Default: 0 second
Description:	Sets a delay before an input trip can occur. The initial delay is counted from the time a start signal is received. The state of the input is ignored until the initial delay has elapsed.	

7E – Input B Function

Options:	Input Trip (N/O) (default)	Zero Speed Sensor
	Input Trip (N/C)	Motor Set Select
	Emergency Mode	Reverse Direction
	Jog Forward	Pump Clean
	Jog Reverse	
Description:	Selects the function of Input B. Refer to parameter 7A <i>Input A Function</i> for details.	

7F – Input B Trip

Options:	Always Active
	Operating Only (default)
	Run Only
Description:	Selects when an input trip can occur.

7G – Input B Trip Delay

Range:	0:00 - 4:00 (minutes:seconds)	Default: 0 second
Description:	Sets a delay between the input activating and the soft starter tripping.	

7H – Input B Initial Delay

Range:	00:00 - 30:00 (minutes:seconds)	Default: 0 second
Description:	Sets a delay before an input trip can occur. The initial delay is counted from the time a start signal is received. The state of the input is ignored until the initial delay has elapsed.	

7I – Reset/Enable Logic

Options:	Normally Closed (default)
	Normally Open
Description:	Selects whether the reset input (10, 11) is normally open or normally closed.



NOTE
If the reset input is active, the starter will not operate.

7J – Input A Name

Options:	Input A Trip (default)	Controller
	Low Pressure	PLC
	High Pressure	Vibration Alarm
	Pump Fault	Field Trip
	Low Level	Interlock Trip
	High Level	Motor Temperature
	No Flow	Motor Protection
	Starter Disable	Feeder Protection
		Custom Message
Description:	Selects a message for the keypad to display when Input A is active.	
The custom message can be loaded via the USB port. Refer to <i>USB Save & Load</i> on page 25 for details.		

7K – Input B Name

Options:	Input B Trip (default)	Controller
	Low Pressure	PLC
	High Pressure	Vibration Alarm
	Pump Fault	Field Trip
	Low Level	Interlock Trip
	High Level	Motor Temperature
	No Flow	Motor Protection
	Starter Disable	Feeder Protection
		Custom Message

Description: Selects a message for the keypad to display when Input B is active.

9.12

8 Relay Outputs

8A – Relay A Function

Options:	Off	Relay A is not used.
	Ready	The relay is closed when the starter is in Ready state.
	Run (default)	The Run output closes when the soft start is complete (when the starting current falls below 120% of the programmed motor full load current) and remains closed until the beginning of a stop (either soft stop or coast to stop).
	Warning	The relay closes when the starter issues a warning (refer to <i>6 Protection Action</i> on page 54).
	Trip	The relay closes when the starter trips (refer to <i>6 Protection Action</i> on page 54).
	Low Current Flag	The relay closes when the low current flag activates while the motor is running (refer to parameter 8G <i>Low Current Flag</i>).
	High Current Flag	The relay closes when the high current flag activates while the motor is running (refer to parameter 8H <i>High Current Flag</i>).
	Motor Temperature Flag	The relay closes when the motor temperature flag activates (refer to parameter 8I <i>Motor Temperature Flag</i>).
	Soft Brake Relay	The relay closes when the soft starter receives a stop signal, and remains closed until the end of soft brake.
	Reversing Contactor	The relay will control an external contactor, for reverse operation. Refer to <i>Reverse Direction Operation</i> on page 38 for details.

Description: Selects the function of Relay A. Relay A is a changeover relay.

8B – Relay A On Delay

Range:	0:00 - 5:00 (minutes:seconds)	Default: 0 second
Description:	Sets the delay for changing the state of Relay A.	

8C – Relay A Off Delay

Range:	0:00 - 5:00 (minutes:seconds)	Default: 0 second
Description:	Sets the delay for changing the state of Relay A.	

8D – Relay B Function

Options:	Off	Low Current Flag
	Ready	High Current Flag
	Run (default)	Motor Temperature Flag
	Warning	Soft Brake Relay
	Trip	Reversing Contactor
Description:	Selects the function of Relay B (normally open). Refer to parameter 8A <i>Relay A Function</i> for details.	

8E – Relay B On Delay

Range:	0:00 - 5:00 (minutes:seconds)	Default: 0 second
Description:	Sets the delay for closing Relay B.	

8F – Relay B Off Delay

Range:	0:00 - 5:00 (minutes:seconds)	Default: 0 second
Description:	Sets the delay for re-opening Relay B.	

8G – Low Current Flag

The ASA 4.0 Advanced has low and high current flags to give early warning of abnormal operation. The current flags can be configured to indicate an abnormal current level during operation, between the normal operating level and the undercurrent or instantaneous overcurrent trip levels. The flags can signal the situation to external equipment via one of the programmable outputs.

The flags clear when the current returns within the normal operating range by 10% of the programmed flag value.

Range: 1% - 100% FLC

Default: 50%

Description: Sets the level at which the low current flag operates, as a percentage of motor full load current.

8H – High Current Flag

Range: 50% - 600% FLC

Default: 100%

Description: Sets the level at which the high current flag operates, as a percentage of motor full load current.

8I – Motor Temperature Flag

The ASA 4.0 Advanced has a motor temperature flag to give early warning of abnormal operation. The flag can indicate that the motor is operating above its normal operating temperature but lower than the overload limit. The flag can signal the situation to external equipment via one of the programmable outputs.

Range: 0% - 160%

Default: 80%

Description: Sets the level at which the motor temperature flag operates, as a percentage of the motor's thermal capacity.

8J – Main Contactor Time

Range: 100 – 2000 milliseconds

Default: 400 milliseconds

Description: Sets the delay period between the starter switching the main contactor output (terminals 33, 34) and beginning the pre-start checks (before a start) or entering the not ready state (after a stop). Set according to the specifications of the main contactor used.

9.13 9 Analog Output

9A – Analog Output A

Options:	Current (% FLC) (default)	Current as a percentage of motor full load current.
	Motor Temperature (%)	The motor's temperature, calculated by the thermal model.
	Motor pf	Motor power factor, measured by the soft starter.
	Motor Power (%kW)	Motor power, as a percentage of the programmed power.
	Heatsink Temperature (°C)	The soft starter's temperature, measured at the heatsink.

Description: Selects which information will be reported via the analog output.

9B – Analog A Scale

Range: 0-20 mA
4-20 mA (default)

Description: Selects the range of the analog output.

9C – Analog A Maximum Adjustment

Range: 0% - 600%

Default: 100%

Description: Calibrates the upper limit of the analog output to match the signal measured on an external current measuring device.

9D – Analog A Minimum Adjustment

Range: 0% - 600%

Default: 0%

Description: Calibrates the lower limit of the analog output to match the signal measured on an external current measuring device.

9.14 10 Display

10A – Language

Options:	English (default)	Português
	Chinese	Français
	Español	Italiano
	Deutsch	Russian

Description: Selects which language the keypad will use to display messages and feedback.

10B – Temperature Scale

Options:	Celsius (default) Fahrenheit
Description:	Selects whether the ASA 4.0 Advanced will display temperatures in degrees Celsius or Fahrenheit.

10C – Graph Timebase

Options:	30 seconds (default) 1 minute 30 minutes 1 hour
Description:	Sets the graph time scale. The graph will progressively replace the old data with new data.

10D – Graph Maximum Adjustment

Range:	0% – 600%	Default: 400%
Description:	Adjusts the upper limit of the performance graph.	

10E – Graph Minimum Adjustment

Range:	0% – 600%	Default: 0%
Description:	Adjusts the lower limit of the performance graph.	

10F – Current Calibration

Range:	85% - 115%	Default: 100%
Description:	Calibrates the soft starter's current monitoring circuits to match an external current metering device. Use the following formula to determine the necessary adjustment:	
	$\text{Calibration (\%)} = \frac{\text{Current shown on ASA 4.0 Advanced display}}{\text{Current measured by external device}}$	

10G – Adjustment Lock

Options:	Read & Write (default) Read Only	Allows users to alter parameter values in the main menu. Prevents users altering parameter values in the main menu. Parameter values can still be viewed.
Description:	Selects whether the keypad will allow parameters to be changed via the main menu.	

10H – User Parameter 1

Options:	Blank	Displays no data in the selected area, allowing long messages to be shown without overlapping.
	Current (default)	Average rms current across all three phases
	Motor Voltage	Average rms voltage across all three phases.
	P1 Voltage	Phase 1 voltage.
	P2 Voltage	Phase 2 voltage.
	P3 Voltage	Phase 3 voltage.
	Mains Frequency	The average frequency measured on three phases.
	Motor pf	The motor's power factor, measured by the soft starter.
	Motor Power	The motor's running power in kilowatts.
	Motor Temperature (%)	The motor's temperature, calculated by the thermal model.
	Hours Run	The number of hours the motor has run via the soft starter.
	Number of Starts	The number of starts the ASA 4.0 Advanced has completed since the start counter was last reset.
	Pump Pressure	The pressure at the pump, as configured in parameters 30B-30D. This information is only available if the smart card is installed.
	Pump Flow	The flow at the pump, as configured in parameters 30F-30K. This information is only available if the smart card is installed.
	Well Depth	The depth of the well, as configured in parameters 30M-30O. This information is only available if the smart card is installed.
	Pump Temperature	The pump temperature, as measured by the PT100. This information is only available if the smart card is installed.
	Analog Output Value	The value of the analog output (refer to parameters 9A-9D).
	Heatsink Temperature	The soft starter's temperature, measured at the heatsink.
	Bypass Model (%)	The percentage of thermal capacity remaining in the bypass contactor.
	SCR Temperature	The temperature of the SCRs, calculated by the thermal model.
	Rating Capacity (%)	The thermal capacity available in the soft starter for its next start.
Description:	Selects which information will be displayed on the main monitoring screen.	

10I – User Parameter 2

Options: Refer to parameter 10H *User Parameter 1* for details. **Default:** Motor Voltage
Description: Selects which information will be displayed on the main monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10J – User Parameter 3

Options: Refer to parameter 10H *User Parameter 1* for details. **Default:** Mains Frequency
Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10K – User Parameter 4

Options: Refer to parameter 10H *User Parameter 1* for details. **Default:** Motor pf
Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10L – User Parameter 5

Options: Refer to parameter 10H *User Parameter 1* for details. **Default:** Motor Power
Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

10M – User Parameter 6

Options: Refer to parameter 10H *User Parameter 1* for details. **Default:** Motor Temperature (%)
Description: Selects which information will be displayed on the programmable monitoring screen. Refer to parameter 10H *User Parameter 1* for details.

9.15 11 Pump Clean

11A – Reverse Torque

Range: 20% - 100% **Default:** 20%
Description: Sets the torque level for reverse jog operation during pump clean.

11B – Reverse Time

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 10 seconds
Description: Sets the time for the starter to operate in reverse jog during a pump clean cycle.

11C – Forward Current Limit

Range: 100% - 600% FLC **Default:** 100%
Description: Sets the current limit for forward start operation during pump clean.

11D – Forward Time

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 10 seconds
Description: Sets the time for the starter to run the motor after a forward start, during a pump clean cycle.

11E – Pump Stop Mode

Options: Coast To Stop (default)
TVR Soft Stop
Description: Selects the stop mode for pump clean.

11F – Pump Stop Time

Range: 0:00 - 1:00 (minutes:seconds) **Default:** 10 seconds
Description: Sets the stopping time for the starter during a pump clean cycle.

11G – Pump Clean Cycles

Range: 1 – 5 Default: 1
 Description: Sets how many times the soft starter will repeat the pump clean cycle.

9.16

12 Communications Card

12A – Modbus Address

Range: 1 - 254 Default: 1
 Description: Sets the Modbus RTU network address for the soft starter.

12B – Modbus Baud Rate

Options: 4800
 9600 (default)
 19200
 38400
 Description: Selects the baud rate for Modbus RTU communications.

12C – Modbus Parity

Options: None (default)
 Odd
 Even
 10-bit
 Description: Selects the parity for Modbus RTU communications.

12D – Modbus Timeout

Options: Off (default)
 10 seconds
 60 seconds
 100 seconds
 Description: Selects the timeout for Modbus RTU communications.

12E – DeviceNet Address

Range: 0 - 63 Default: 0
 Description: Sets the DeviceNet network address for the soft starter.

12F – DeviceNet Baud Rate

Options: 125 kB (default)
 250 kB
 500 kB
 Description: Selects the baud rate for DeviceNet communications.

12G – Profibus Address

Range: 1 - 125 Default: 1
 Description: Sets the Profibus network address for the soft starter.

12H – Gateway Address

Range: 0 - 255 Default: 192
 Description: Sets the first component of the network gateway address. The gateway address is set using parameters 12H-12K and the default address is 192.168.0.100.

12I – Gateway Address 2

Range: 0 - 255 Default: 168
 Description: Sets the second component of the network gateway address.

12J – Gateway Address 3

Range: 0 - 255 Default: 0
 Description: Sets the third component of the network gateway address.

12K – Gateway Address 4

Range: 0 - 255 Default: 100
 Description: Sets the fourth component of the network gateway address.



NOTE

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 26 for details.

12L – IP Address

Range: 0 - 255 Default: 192
 Description: Sets the first component of the soft starter's IP address, for Ethernet communications. The IP address is set using parameters 12L~12O and the default address is 192.168.0.2.

12M – IP Address 2

Range: 0 - 255 Default: 168
 Description: Sets the second component of the soft starter's IP address, for Ethernet communications.

12N – IP Address 3

Range: 0 - 255 Default: 0
 Description: Sets the third component of the soft starter's IP address, for Ethernet communications.

12O – IP Address 4

Range: 0 - 255 Default: 2
 Description: Sets the fourth component of the soft starter's IP address, for Ethernet communications.



NOTE

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 26 for details.

12P – Subnet Mask

Range: 0 - 255 Default: 255
 Description: Sets the first component of the network subnet mask, for Ethernet communications. The subnet mask is set using parameters 12P~12S and the default mask is 255.255.255.0.

12Q – Subnet Mask 2

Range: 0 - 255 Default: 255
 Description: Sets the second component of the network subnet mask, for Ethernet communications.

12R – Subnet Mask 3

Range: 0 - 255 Default: 255
 Description: Sets the third component of the network subnet mask, for Ethernet communications.

12S – Subnet Mask 4

Range: 0 - 255 Default: 0
 Description: Sets the fourth component of the network subnet mask, for Ethernet communications.



NOTE

The network address can also be set via the Network Address options in the Setup Tools. Refer to *Network Address* on page 26 for details.

12T – DHCP

Options: Disable (default)
Enable

Description: Selects whether the communications card will accept an IP address assigned by DHCP.



NOTE

DHCP addressing is available with Modbus TCP and Ethernet/IP. DHCP addressing is not supported with Profinet.

12U – Location ID

Range: 0 - 65535 **Default:** 0

Description: Sets the soft starter's unique location ID.

9.17

20 Advanced

20A – Tracking Gain

Range: 1% - 200% **Default:** 50%

Description: Fine-tunes the behaviour of the adaptive control algorithm.

20B – Pedestal Detect

Range: 0% - 200% **Default:** 80%

Description: Adjusts the behaviour of the adaptive control algorithm for soft stop.

20C – Bypass Contactor Delay


Range: 100 – 2000 milliseconds **Default:** 150 milliseconds

Description: Sets the starter to match the bypass contactor closing/opening time. Set according to the specifications of the bypass contactor used. If this time is too short, the starter will trip.

20D – Model Rating

Range: 0020–0580 **Default:** Model dependent

Description: The soft starter's internal model reference, as shown on the silver label on the side of the unit (**1**).

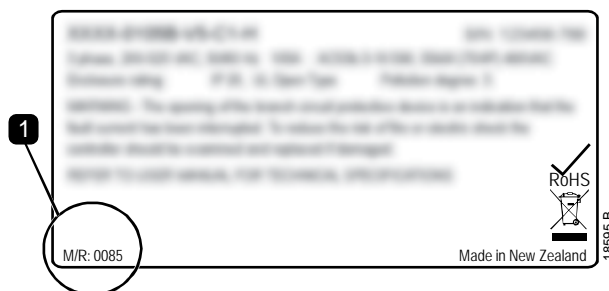

NOTE

This parameter can only be adjusted by authorised servicing agents.

20E – Screen Timeout

Options: 1 minute (default) 4 minutes
2 minutes 5 minutes
3 minutes

Description: Sets the timeout for the menu to automatically close if no keypad activity is detected.

20F – Motor Connection

Options: Auto-detect (default)
In-line
Inside delta

Description: Selects whether the soft starter will automatically detect the format of the connection to the motor.

9.18

30 Pump Input Configuration



NOTE

The parameters in this group are only active if a smart card is installed.

30A – Pressure Sensor Type

Options: None (default)
Switch
Analog

Description: Selects which type of sensor is associated with the pressure sensor input on the smart card.

30B – Pressure Units

Options: Bar
kPa (default)
Psi

Description: Selects which units the sensor will use to report the measured pressure.

30C – Pressure at 4 mA

Range: 0 – 5000

Default: 0

Description: Calibrates the soft starter to the 4 mA (0%) level of the pressure sensor input.

30D – Pressure at 20 mA

Range: 0 – 5000

Default: 0

Description: Calibrates the soft starter to the 20 mA (100%) level of the pressure sensor input.

30E – Flow Sensor Type

Options: None (default) Pulses per minute
Switch Pulses per unit
Analog

Description: Selects which type of sensor is associated with the flow sensor input on the smart card.

30F – Flow Units

Options: litres/second (default)
litres/minute
gallons/second
gallons/minute

Description: Selects which units the sensor will use to report the measured flow.

30G – Flow at 4 mA

Range: 0 – 5000

Default: 0

Description: Calibrates the soft starter to the 4 mA (0%) level of the flow sensor input.

30H – Flow at 20 mA

Range: 0 – 5000

Default: 0

Description: Calibrates the soft starter to the 20 mA (100%) level of the flow sensor input.

30I – Units per Minute at Max Flow

Range: 0 – 5000

Default: 0

Description: Calibrates the soft starter to the maximum flow volume of the flow sensor.

30J – Pulses per Minute at Max Flow

Range: 0 – 20000 Default: 0
 Description: Calibrates the soft starter to the maximum flow volume of the flow sensor.

30K – Units per Pulse

Range: 0 – 1000 Default: 0
 Description: Set to match how many units the flow sensor will measure for each pulse.

30L – Depth Sensor Type

Options: None (default)
 Switch
 Analog
 Description: Selects which type of sensor is associated with the depth sensor input on the smart card.

30M – Depth Units

Options: metres (default)
 feet
 Description: Selects which units the sensor will use to report the measured depth.

30N – Depth at 4 mA

Range: 0 – 1000 Default: 0
 Description: Calibrates the soft starter to the 4 mA (0%) level of the depth sensor input.

30O – Depth at 20 mA

Range: 0 – 1000 Default: 0
 Description: Calibrates the soft starter to the 20 mA (100%) level of the depth sensor input.

9.19

31 Flow Protection



NOTE
 The parameters in this group are only active if a smart card is installed.

Flow protection uses terminals B33, B34 or C23, C24 on the smart card.

31A – High Flow Trip Level

Range: 0 – 5000 Default: 10
 Description: Sets the trip point for high flow protection.

31B – Low Flow Trip Level

Range: 1 – 5000 Default: 5
 Description: Sets the trip point for low flow protection.

31C – Flow Start Delay

Range: 00:00:50 - 30:00:00 mm:ss:ms Default: 00:00:500 ms
 Description: Sets a delay before a flow protection trip can occur. The delay is counted from the time a start signal is received. The flow level is ignored until the start delay has elapsed.

31D – Flow Response Delay

Range: 00:00:10 - 30:00:00 mm:ss:ms Default: 00:00:500 ms
 Description: Sets a delay between the flow passing the high or low flow trip levels, and the soft starter tripping.

9.20 32 Pressure Protection



NOTE

The parameters in this group are only active if a smart card is installed.

Pressure protection uses terminals B23, B24 or C33, C34, C43, C44 on the smart card.

32A – High Pressure Trip Level

Range: 0 – 5000 Default: 10
Description: Sets the trip point for high pressure protection.

32B – High Pressure Start Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
Description: Sets a delay before a high pressure protection trip can occur. The delay is counted from the time a start signal is received. The pressure is ignored until the start delay has elapsed.

32C – High Pressure Response Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
Description: Sets a delay between the pressure passing the high pressure trip level, and the soft starter tripping.

32D – Low Pressure Trip Level

Range: 0 – 5000 Default: 5
Description: Sets the trip point for low pressure protection.

32E – Low Pressure Start Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
Description: Sets a delay before a low pressure protection trip can occur. The delay is counted from the time a start signal is received. The pressure is ignored until the start delay has elapsed.

32F – Low Pressure Response Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
Description: Sets a delay between the pressure passing the low pressure trip level, and the soft starter tripping.

9.21 33 Pressure Control



NOTE

The parameters in this group are only active if a smart card is installed.

Pressure control uses terminals B23, B24 on the smart card. Use an analog 4-20 mA sensor.

33A – Pressure Control Mode

Options: Off (default) The soft starter will not use the pressure sensor to control soft starting.
Falling Pressure Start The soft starter will start when the pressure drops below the level selected in parameter 33B *Start Pressure Level*.
Rising Pressure Start The soft starter will start when the pressure rises above the level selected in parameter 33B *Start Pressure Level*.
Description: Selects how the soft starter will use data from the pressure sensor to control the motor.

33B – Start Pressure Level

Range: 1 – 5000 Default: 5
Description: Sets the pressure level to trigger the soft starter to perform a soft start.

33C – Start Response Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
Description: Sets a delay between the pressure passing the pressure control start level, and the soft starter performing a soft start.

33D – Stop Pressure Level

Range: 0 – 5000 Default: 10
 Description: Sets the pressure level to trigger the soft starter to stop the motor.

33E – Stop Response Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
 Description: Sets a delay between the pressure passing the pressure control stop level, and the soft starter stopping the motor.

9.22

34 Depth Protection



NOTE
 The parameters in this group are only active if a smart card is installed.

Depth protection uses terminals B13, B14 or C13, C14 on the smart card.

34A – Depth Trip Level

Range: 0 – 1000 Default: 5
 Description: Sets the trip point for depth protection.

34B – Depth Reset Level

Range: 0 – 1000 Default: 10
 Description: Sets the level for the soft starter to auto-reset a depth trip.

34C – Depth Start Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 milliseconds
 Description: Sets a delay before a depth protection trip can occur. The delay is counted from the time a start signal is received. The depth input is ignored until the start delay has elapsed.

34D – Depth Response Delay

Range: 00:00:10 – 30:00:00 mm:ss:ms Default: 00:00:500 ms
 Description: Sets a delay between the depth passing the depth protection trip level, and the soft starter tripping.

9.23

35 Thermal Protection



NOTE
 The parameters in this group are only active if a smart card is installed.

35A – Temperature Sensor Type

Options: None (default)
 PT100
 Description: Selects which type of sensor is associated with the temperature sensor input on the smart card.

35B – Temperature Trip Level

Range: 0° – 240° Default: 40°
 Description: Sets the trip point for temperature protection. Use parameter 10B *Temperature Scale* to configure the temperature scale.

9.24

36 Pump Trip Action

36A – Pressure Sensor

Options: Soft Trip and Log (default) Trip and Reset
 Soft Trip and Reset Warn and Log
 Trip Starter Log Only
 Description: Selects the soft starter's response if it detects a fault with the pressure sensor.

36B – Flow Sensor

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if it detects a fault with the flow sensor.

36C – Depth Sensor

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if it detects a fault with the depth sensor.

36D – High Pressure

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the pressure exceeds the high pressure trip level (parameter 32A) or the high pressure switch sensor closes.

36E – Low Pressure

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the pressure falls below the low pressure trip level (parameter 32D) or the low pressure switch sensor closes.

36F – High Flow

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the flow exceeds the high flow trip level (parameter 31A).

36G – Low Flow

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the flow falls below the low flow trip level (parameter 31B).

36H – Flow Switch

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the flow sensor closes (switch type sensors only).

36I – Well Depth

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only

Description: Selects the soft starter's response if the depth falls below the depth trip level (parameter 34A) or the depth switch sensor closes.

36J – RTD/PT100 B

Options:	Soft Trip and Log (default)	Trip and Reset
	Soft Trip and Reset	Warn and Log
	Trip Starter	Log Only


Description: Selects the soft starter's response to the protection event.

10 Application Examples

10.1 Smart Card - Pump Control and Protection

The ASA 4.0 Advanced smart card is ideal for applications with extensive external inputs, such as pumping situations where external sensors provide additional protection to the pump and motor.

In this example, the ASA 4.0 Advanced controls a bore pump via scheduled start/stop operation. The control panel is fitted with a three-way selector switch allowing Auto Run, Stop or Manual Run. Three 4-20 mA transducers are used to monitor water depth, pipe pressure and flow.

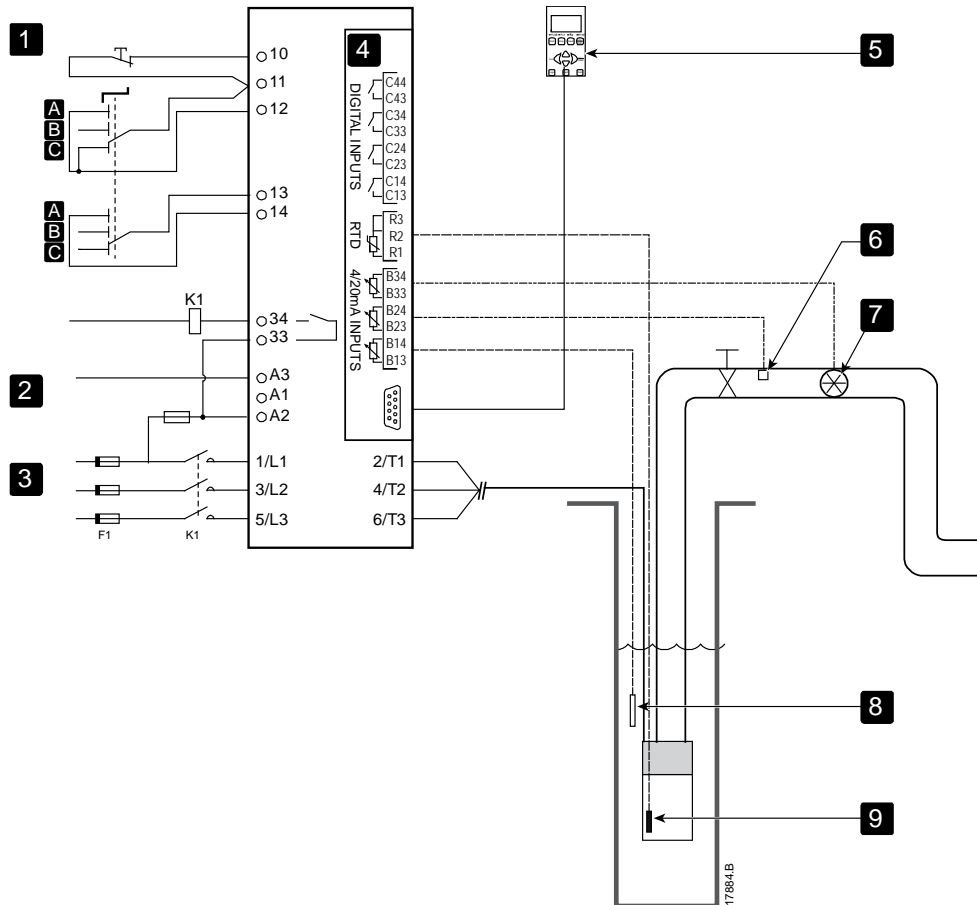

1	Digital inputs
A	Manual start
B	Manual stop
C	Automatic operation (scheduled start/stop)
2	Control voltage
3	Three-phase supply
4	Smart card
5	Remote keypad (optional)
6	Pressure sensor
7	Flow sensor
8	Depth sensor
9	Temperature sensor

K1	Main contactor
10, 11	Reset input
11, 12	Start/stop input
13, 14	Programmable input A (set = Command Override: Digital)
33, 34	Main contactor output
R1, R2, R3	Motor temperature protection
B33, B34	Flow protection
B23, B24	Pressure protection
B13, B14	Depth protection

Parameter settings:


- Parameter 1A *Command Source*: select 'Smart Card + Clock'.
- Parameters 4A-4X *Auto-Start/Stop*: Set as required.
- Parameter 7A *Input A Function*: select 'Command Override: Digital'.
- Parameters 30A-30O *Pump Input Configuration*: Set as required.
- Parameters 31A-31D *Flow Protection*: Set as required.
- Parameters 32A-32F *Pressure Protection*: Set as required.
- Parameters 34A-34D *Depth Protection*: Set as required.
- Parameters 35A-35B *Thermal Protection*: Set as required.

10.2 Smart Card - Level Controlled Pump Activation

The ASA 4.0 Advanced smart card can be used to control start/stop activation of the starter, based on information from external inputs.

In this example, the ASA 4.0 Advanced controls a pump which fills a tank, with maximum and minimum water levels. A pressure sensor is used to monitor the level of water in the tank and trigger the pump to fill the tank when water drops below the minimum level, and shut off the pump when the maximum water level is reached.

A three-way selector switch allows the user to override sensor-based control, and manually start or stop the motor.

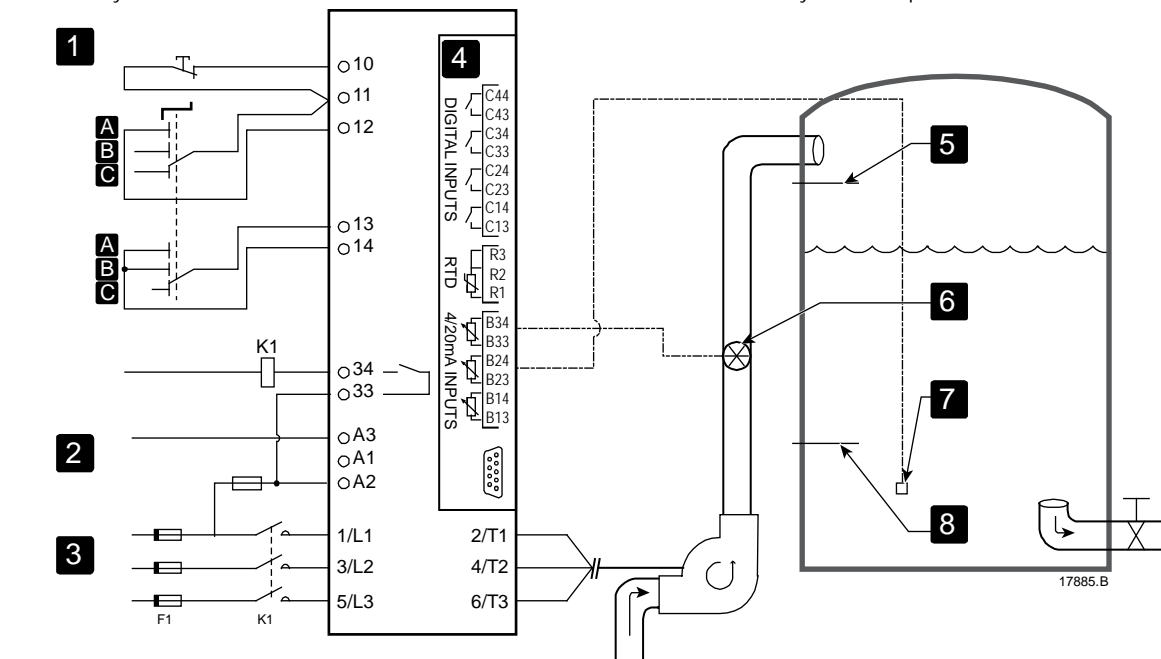

1	Digital inputs
A	Manual start
B	Manual stop
C	Automatic operation (level-controlled)
2	Control voltage
3	Three-phase supply
4	Smart card
5	Maximum water level
6	Flow sensor
7	Pressure sensor
8	Minimum water level

K1	Main contactor
10, 11	Reset input
11, 12	Start/stop input
13, 14	Programmable input A (set = Command Override: Digital)
33, 34	Main contactor output
B33, B34	Flow protection
B23, B24	Pressure or depth based control

Parameter settings:

- Parameter 1A *Command Source*: select 'Smart Card'.
- Parameter 7A *Input A Function*: select 'Command Override: Digital'.
- Parameters 30A-30O *Pump Input Configuration*: Set as required.
- Parameters 31A-31D *Flow Protection*: Set as required.
- Parameters 33A-33E *Pressure Control*: Set as required.

11 Troubleshooting

11.1 Protection Responses

When a protection condition is detected, the ASA 4.0 Advanced will write this to the event log and may also trip or issue a warning. The soft starter's response depends on the Protection Action setting (parameter group 6).

Some protection responses cannot be adjusted by the user. These trips are usually caused by external events (such as phase loss) or by a fault within the soft starter. These trips do not have associated parameters and cannot be set to Warn or Log.


If the ASA 4.0 Advanced trips you will need to identify and clear the condition that triggered the trip, then reset the soft starter before restarting. To reset the starter, press the **RESET** button on the keypad or activate the Reset remote input.

If the ASA 4.0 Advanced has issued a warning, the soft starter will reset itself once the cause of the warning has been resolved.

11.2 Trip Messages

Display	Possible cause/Suggested solution
2 PHASE – DAMAGED SCR	This message is displayed if the soft starter tripped on “Lx-Tx shorted” during the pre-start checks and PowerThrough is enabled. It indicates that the starter now operates in PowerThrough mode (2-phase control only). Check for either a shorted SCR or a short within the bypass contactor. Related parameters: 6S
BATTERY/CLOCK	A verification error has occurred on the real time clock, or the backup battery voltage is low. If the battery is low and the power is off, date/time settings will be lost. The ASA 4.0 Advanced will continue to soft start and soft stop correctly. Reprogram the date and time. The battery is not removable. In order to replace the battery, the main control PCB must be replaced. Related parameters: 6T
BYPASS OVERLOAD	This trip is not adjustable. Bypass overload protection protects the soft starter from severe operating overloads while running. The soft starter will trip if it detects overcurrent at 600% of the contactor rating. Related parameters: None
CURRENT IMBALANCE	Current imbalance can be caused by problems with the motor, the environment or the installation, such as: <ul style="list-style-type: none"> • An imbalance in the incoming mains voltage • A problem with the motor windings • A light load on the motor • A phase loss on input terminals L1, L2 or L3 during Run mode • An SCR that has failed open circuit. A failed SCR can only be definitely diagnosed by replacing the SCR and checking the starter's performance. Related parameters: 5A, 5B, 6C
CURRENT READ ERR LX	Where 'X' is 1, 2 or 3. Internal fault (PCB fault). The output from the CT circuit is not close enough to zero when the SCRs are turned off. Contact your local supplier for advice. Related parameters: None
DEPTH SENSOR	The smart card has detected a fault with the depth sensor. Related parameters: 30L, 36C
EEPROM FAIL	An error occurred loading data from the EEPROM to RAM when the keypad powered up. If the problem persists, contact your local distributor. Related parameters: None
EXCESS START TIME	Excess start time trip can occur in the following conditions: <ul style="list-style-type: none"> • parameter 1B <i>Motor Full Load Current</i> is not appropriate for the motor • parameter 2D <i>Current Limit</i> has been set too low • parameter 2B <i>Start Ramp Time</i> has been set greater than the setting for 50 <i>Excess Start Time</i> • parameter 2B <i>Start Ramp Time</i> is set too short for a high inertia load when using Adaptive Control Related parameters: 1B, 2B, 2D, 3D, 3F
FIRING FAIL PX	Where 'X' is phase 1, 2 or 3. The SCR did not fire as expected. The SCR may be faulty or there may be an internal wiring fault. Related parameters: None
FLC TOO HIGH	If the soft starter is connected to the motor using inside delta configuration, the soft starter may not be correctly detecting the connection. Contact your local supplier for advice. Related parameters: None
FLOW SENSOR	The smart card has detected a fault with the flow sensor. Related parameters: 30E, 36B
FLOW SWITCH	The flow switch sensor (smart card terminals C23, C24) has closed. Related parameters: 30E, 36H

Display	Possible cause/Suggested solution
FREQUENCY	This trip is not adjustable. The mains frequency has gone beyond the specified range. Check for other equipment in the area that could be affecting the mains supply, particularly variable speed drives and switch mode power supplies (SMPS). If the ASA 4.0 Advanced is connected to a generator set supply, the generator may be too small or could have a speed regulation problem. Related parameters: 6O
HEATSINK OVERTEMPERATURE	<ul style="list-style-type: none"> Check that bypass contactors are operating. Check that cooling fans are operating (models ASA4.0-A 0064B-ASA4.0-A 0580B). If mounted in an enclosure, check if ventilation is adequate. The ASA 4.0 Advanced must be mounted vertically. Related parameters: None
HIGH FLOW	The flow sensor connected to the smart card has activated high flow protection. Related parameters: 30E, 30G, 30H, 31A, 31C, 31D, 36F
HIGH PRESSURE	The pressure sensor connected to the smart card has activated high pressure protection. Related parameters: 30A, 30C, 30D, 32A, 32B, 32C, 36D
INPUT A TRIP INPUT B TRIP	The soft starter's programmable input is set to a trip function and has activated. Resolve the trigger condition. Related parameters: 7A, 7B, 7C, 7D, 7E, 7F, 7G, 7H
INSTANTANEOUS OVERCURRENT	This trip is not adjustable. The current on all three phases has exceeded 7.2 times the value of parameter 1B <i>Motor Full Load Current</i> . Causes can include a locked rotor condition or an electrical fault in the motor or cabling. Related parameters: None
INTERNAL FAULT X	Where 'X' is a number. This trip is not adjustable. The ASA 4.0 Advanced has tripped on an internal fault. Contact your local supplier with the fault code (X).
INTERNAL FAULT 88	The soft starter firmware does not match the hardware.
KEYPAD DISCONNECTED	Parameter 1A <i>Command Source</i> is set to Remote Keypad but the ASA 4.0 Advanced cannot detect a remote keypad. If a remote keypad is installed, check the cable is firmly connected to the soft starter. If no remote keypad is installed, change the setting of parameter 1A. Related parameters: 1A
L1 PHASE LOSS L2 PHASE LOSS L3 PHASE LOSS	This trip is not adjustable. During pre-start checks the starter has detected a phase loss as indicated. In run state, the starter has detected that the current on the affected phase has dropped below 10% of the programmed motor FLC for more than 1 second, indicating that either the incoming phase or connection to the motor has been lost. Check the supply and the input and output connections at the starter and at the motor end. Related parameters: None
L1-T1 SHORTED L2-T2 SHORTED L3-T3 SHORTED	During pre-start checks the starter has detected a shorted SCR or a short within the bypass contactor as indicated. Consider using PowerThrough to allow operation until the starter can be repaired. Related parameters: 6S
LOW CONTROL VOLTS	The ASA 4.0 Advanced has detected a drop in the internal control voltage. <ul style="list-style-type: none"> Check the external control supply (A1, A2, A3) and reset the starter. If the external control supply is stable: <ul style="list-style-type: none"> the 24 V supply on the main control PCB may be faulty; or the bypass driver PCB may be faulty. Contact your local supplier for advice. This protection is not active in Ready state. Related parameters: None
LOW FLOW	The flow sensor connected to the smart card has activated low flow protection. Related parameters: 30E, 30G, 30H, 31B, 31C, 31D, 36G
LOW PRESSURE	The pressure sensor connected to the smart card has activated low pressure protection. Related parameters: 30A, 30C, 30D, 32D, 32E, 32F, 36E
LOW WATER	The depth sensor connected to the smart card has activated depth protection. Related parameters: 30L, 30N, 30O, 34A, 34B, 34C, 36I
MOTOR CONNECTION MOTOR CONNECTION T1 MOTOR CONNECTION T2 MOTOR CONNECTION T3	This trip is not adjustable. The motor is not connected correctly to the soft starter. <ul style="list-style-type: none"> Check individual motor connections to the soft starter for power circuit continuity. Check connections at the motor terminal box. If the soft starter is connected to a grounded delta mains supply, adjust parameter 20F <i>Motor Connection</i> to match the motor connection configuration. Related parameters: 20F


Display	Possible cause/Suggested solution
MOTOR OVERLOAD	<p>The motor has reached its maximum thermal capacity. Overload can be caused by:</p> <ul style="list-style-type: none"> • The soft starter protection settings not matching the motor thermal capacity • Excessive starts per hour or start duration • Excessive current • Damage to the motor windings <p>Resolve the cause of the overload and allow the motor to cool. Related parameters: 1B, 1D, 1E, 1F, 5O, 6J</p> <p> NOTE Parameters 1D, 1E and 1F determine the trip current for motor overload protection. The default settings of parameters 1D, 1E and 1F provide Motor Overload Protection: Class 10, Trip Current 105% of FLA (full load amperage) or equivalent.</p>
MOTOR THERMISTOR	<p>The motor thermistor input has been enabled and:</p> <ul style="list-style-type: none"> • The resistance at the thermistor input has exceeded 3.6 kΩ for more than one second. • The motor winding has overheated. Identify the cause of the overheating and allow the motor to cool before restarting. • The motor thermistor input has been opened. <p>If thermistors have previously been connected to the ASA 4.0 Advanced but are no longer required, use the Thermistor Reset function to disable the thermistor. Related parameters: 6Q</p>
NETWORK COMMUNICATION	<p>There is a network communication problem, or the network master may have sent a trip command to the starter. Check the network for causes of communication inactivity. Related parameters: 6M</p>
NOT READY	<ul style="list-style-type: none"> • The reset input may be active. If the reset input is active, the starter will not operate. • The soft starter may be waiting for the restart delay to elapse. The length of the restart delay is controlled by parameter 5P <i>Restart Delay</i>. <p>Related parameters: 5P</p>
OVERCURRENT	<p>The current has exceeded the level set in parameter 5E <i>Overcurrent</i> for longer than the time set in parameter 5F <i>Overcurrent Delay</i>. Causes can include a momentary overload condition. Related parameters: 5E, 5F, 6E</p>
OVERPOWER	<p>The motor has experienced a sharp rise in power. Causes can include a momentary overload condition which has exceeded the adjustable delay time. Related parameters: 5M, 5N, 6I</p>
OVERVOLTAGE	<p>There has been a voltage surge on the mains. Causes can include problems with a transformer tap regulator or off-loading of a large transformer load. Related parameters: 5I, 5J, 6G</p>
PARAMETER OUT OF RANGE	<p>This trip is not adjustable.</p> <ul style="list-style-type: none"> • A parameter value is outside the valid range. The keypad will indicate the first invalid parameter. • An error occurred loading data from the EEPROM to RAM when the keypad powered up. • The parameter set or values in the keypad do not match the parameters in the starter. • "Load User Set" has been selected but no saved file is available. <p>Reset the fault. The starter will load the default settings. If the problem persists, contact your local distributor. Related parameters: None</p>
PHASE SEQUENCE	<p>The phase sequence on the soft starter's input terminals (L1, L2, L3) is not valid. Check the phase sequence on L1, L2, L3 and ensure the setting in parameter 5R is suitable for the installation. Related parameters: 5R, 6P</p>
POWER LOSS	<p>This trip is not adjustable.</p> <p>The starter is not receiving mains supply on one or more phases. Check that the main contactor closes when a start command is given, and remains closed until the end of a soft stop. Check the fuses. If testing the soft starter with a small motor, it must draw at least 10% of the starter's programmed FLC setting on each phase. Related parameters: None</p>
PRESSURE SENSOR	<p>The smart card has detected a fault with the pressure sensor. Related parameters: 30A, 36A</p>
RATING CAPACITY	<p>The ASA 4.0 Advanced is operating beyond its safe capacity. Allow the starter to cool. Related parameters: None</p>
RTD CIRCUIT	<p>The smart card has detected a fault with the RTD sensor, or the RTD has activated temperature protection. Related parameters: 35B, 36J</p>
SCR ITSM	<p>The SCR current surge rating has been exceeded. Related parameters: None</p>

Display	Possible cause/Suggested solution
SCR OVERTEMPERATURE	The temperature of the SCRs, calculated by the thermal model, is too high to allow further operation. Wait for the starter to cool. Related parameters: None
STARTER COMMUNICATION	There is a problem with the connection between the soft starter and the optional expansion card. Remove and reinstall the card. If the problem persists, contact your local distributor. Related parameters: None
STARTS PER HOUR	The soft starter has already attempted the maximum number of starts in the last 60 minutes. Wait before attempting another start. To determine when the waiting period will end, review the log. Related parameters: 5Q
THERMISTOR CIRCUIT	The thermistor input has been enabled and: <ul style="list-style-type: none"> The resistance at the input has fallen below 20 Ω (the cold resistance of most thermistors will be over this value) or A short circuit has occurred. Check and resolve this condition. Related parameters: None
TIME-OVERCURRENT	The ASA 4.0 Advanced is internally bypassed and has drawn high current during running. (The 10A protection curve trip has been reached or the motor current has risen to 600% of the motor FLC setting.) Related parameters: None
UNDERCURRENT	The motor has experienced a sharp drop in current, caused by loss of load. Causes can include broken components (shafts, belts or couplings), or a pump running dry. Related parameters: 5C, 5D, 6D
UNDERPOWER	The motor has experienced a sharp drop in power, caused by loss of load. Causes can include broken components (shafts, belts or couplings), or a pump running dry. Related parameters: 5K, 5L, 6H
UNDERVOLTAGE	Mains voltage has fallen below the level selected. Causes can include an undersized supply or adding a large load to the system. Related parameters: 5G, 5H, 6F
UNSUPPORTED OPTION	The selected function is not available (eg jog is not supported in inside delta configuration). Related parameters: None
U2C FAIL PX	Where 'X' is 1, 2 or 3. Internal fault (PCB fault). Contact your local supplier for advice. Related parameters: None
ZERO SPEED DETECT	The zero speed input has not closed within the expected duration of a soft stop. <ul style="list-style-type: none"> Check the zero speed sensor is operating correctly. Check that parameters 2Q <i>Brake Current Limit</i> and 5O <i>Excess Start Time</i> are appropriate for the application. Related parameters: 2Q, 3S, 5O

11.3 General Faults

This table describes situations where the soft starter does not operate as expected but does not trip or give a warning.

Symptom	Probable Cause
Starter "Not Ready"	<ul style="list-style-type: none"> The reset input may be active. If the reset input is active, the starter will not operate.
"Simul" on display	<ul style="list-style-type: none"> The starter is running simulation software. This software is intended for demonstration purposes only and is not suitable for controlling a motor. Contact your local supplier for advice.
The soft starter does not respond to the START or RESET button on the keypad.	<ul style="list-style-type: none"> The soft starter will only accept commands from the keypad if parameter 1A <i>Command Source</i> is set to Remote Keypad. Check that the Local LED on the starter is on.
The soft starter does not respond to commands from the control inputs.	<ul style="list-style-type: none"> The soft starter will only accept commands from the inputs if parameter 1A <i>Command Source</i> is set to Digital Input. Check the setting of 1A. The control wiring may be incorrect. Check that the remote start, stop and reset inputs are configured correctly (refer to <i>Start/Stop</i> on page 18 for details). The signals to the remote inputs may be incorrect. Test the signalling by activating each input signal in turn.

Symptom	Probable Cause
The soft starter does not respond to a start command from either the keypad or the digital inputs.	<ul style="list-style-type: none"> The soft starter may be waiting for the restart delay to elapse. The length of the restart delay is controlled by parameter 5P <i>Restart Delay</i>. The motor may be too hot to permit a start. The soft starter will only permit a start when it calculates that the motor has sufficient thermal capacity to complete the start successfully. Wait for the motor to cool before attempting another start. The reset input may be active. If the reset input is active, the starter will not operate. The soft starter may be waiting for control signals via the communications network (parameter 1A <i>Command Source</i> = Network). The ASA 4.0 Advanced may be waiting for a scheduled auto-start (parameter 1A <i>Command Source</i> = Clock).
Erratic and noisy motor operation.	<ul style="list-style-type: none"> If the soft starter is connected to the motor using inside delta configuration, the soft starter may not be correctly detecting the connection. Contact your local supplier for advice.
Remote keypad shows message "awaiting data"	The keypad is not receiving data from the control PCB. Check the cable connection.
The soft starter does not control the motor correctly during starting.	<ul style="list-style-type: none"> Start performance may be unstable when using a low <i>Motor Full Load Current</i> setting (parameter 1B). Power factor correction (PFC) capacitors must be installed on the supply side of the soft starter and must be disconnected during starting and stopping. To use the ASA 4.0 Advanced to control power factor correction, connect the PFC contactor to a programmable relay set to Run. High levels of harmonics on the mains supply can affect soft starter performance. If variable speed drives are installed nearby, check they are properly grounded and filtered.
Motor does not reach full speed.	<ul style="list-style-type: none"> If the start current is too low, the motor will not produce enough torque to accelerate to full speed. The soft starter may trip on excess start time. <p>NOTE  Make sure the motor starting parameters are appropriate for the application and that you are using the intended motor starting profile. If a programmable input is set to Motor Set Select, check that the corresponding input is in the expected state.</p> <ul style="list-style-type: none"> The load may be jammed. Check the load for severe overloading or a locked rotor situation.
Soft stop ends too quickly.	<ul style="list-style-type: none"> The soft stop settings may not be appropriate for the motor and load. Review the soft stop settings. If the motor is very lightly loaded, soft stop will have limited effect.
After selecting Adaptive Control the motor used an ordinary start and/or the second start was different to the first.	<ul style="list-style-type: none"> The first Adaptive Control start is actually 'Constant Current' so that the starter can learn from the motor characteristics. Subsequent starts use Adaptive Control.
PowerThrough does not operate when selected.	<ul style="list-style-type: none"> The starter will trip on Lx-Tx Shorted on the first start attempt after control power is applied. PowerThrough will not operate if control power is cycled between starts.
Parameter settings cannot be stored.	<ul style="list-style-type: none"> Make sure you are saving the new value by pressing the STORE button after adjusting a parameter setting. If you press EXIT, the change will not be saved. The ASA 4.0 Advanced does not display a confirmation. Check that the adjustment lock (parameter 10G) is set to Read & Write. If the adjustment lock is set to Read Only, settings can be viewed but not changed.
USB Full	<ul style="list-style-type: none"> The USB drive may not have enough free space available for the selected function. The file system on the USB drive may not be compatible with the soft starter. The ASA 4.0 Advanced supports FAT32 file systems. The ASA 4.0 Advanced's USB functions are not compatible with NTFS file systems.
USB Missing	A USB function has been selected in the menu, but the product cannot detect a USB drive. Check that the USB drive has been inserted in the port.
File Missing	A USB function has been selected in the menu, but the required file cannot be found. Save/Load Master Parameters uses a file called Master_Parameters.par, at the top level of the USB drive. For these functions to work correctly, do not move or rename this file.
File Not Valid	A USB function has been selected in the menu, but the file is not valid.
File Empty	A USB function has been selected in the menu and the file has been found, but does not contain the expected content.
Rating Not Valid	The value of parameter 20D <i>Model Rating</i> is incorrect. Parameter 20D is not user-adjustable. Contact your local supplier for advice.